



## LSN50 LoRaWAN Sensor Node User Manual

Document Version: 1.7.3

Image Version: v1.7.0

Version	Description	Date
1.0	Release	2018-Dec-4
1.1	Add steps of install STM320x; Add ST-Link Upload firmware method	2018-Dec-27
1.2	Add trouble shooting for UART upload, Add change log for firmware v1.4	2019-Jan-23
1.2.1	More detail description for 8 channel mode and trouble shooting for using in US915/AU915	2019-Feb-21
1.2.2	Modify trouble shooting for upload via Flashloader	2019-Mar-13
1.2.3	Add ISP Mode / Flash mode different/ Add working flow diagram (Chapter 2.1 how it works) Add FAQ for how to configure the Keys	2019-Apr-1
1.5.0	Upgrade to v1.5 version firmware Add ultrasonic sensor support and description. Add downlink description Change decoder for v1.5 Add working flow chart Add Mydevices support	2019-Apr-19
1.5.1	Improve Interrupt feature, change interrupt example to use door sensor	
1.5.2	Various minor text and format edits.	2019-Jun-10
1.6.0	Update to firmware v1.6 version, add 3ADC mode	2019-Aug-7
1.6.1	Trouble shooting for AT Command input Add support for 3 * DS18B20 (MOD4)	2019-Sep-18
1.6.2	Add door sensor detail/ power, Add battery connector info	2019-Dec-13
1.6.3	Add firmware version 1.6.2 change log, Add support for HX711 Weight Sensor	2019-Dec-31
1.6.4	Add New AT Command for 1.6.3. Add LSN50 v2.0 Hardware info	2020-Jan-13
1.6.5	Add battery measure suggestion, Add ADC range, Add change log for v1.6.4	2020-May-19
1.6.6	Add MOD=6 (counting) for firmware version v1.6.5, Update description for interrupt and 5v out, correction of digital input payload, change description for MOD=2 and MOD=5.	2020-Jul-15
1.7.0	Upgrade manual for v1.7.0. See <a href="#">change log</a> .	2020-Nov-6
1.7.1	Add working mode payload, Add illumination sensor	2020-Dec-5
1.7.2	Correct ADC payload position error for MOD1 and MOD2, Add boot mode description, add VDD, +5v Out description.	2021-Jan-23

1.7.3	Add Power on photo for LSN50v2, add jumper info. Add New order option for Battery LSn50 v2.1 hardware change log	2021-Mar-17
-------	--	-------------

1.	Introduction	4
1.1	What is LSN50 LoRa Sensor Node	4
1.2	Specifications	5
1.3	Features	6
1.4	Applications	6
1.5	Pin Definitions and Switch	7
1.5.1	Jumper JP2	8
1.5.2	BOOT MODE / SW1	8
1.5.3	Reset Button	9
1.5.4	LED	9
1.6	Hardware Change log	9
1.7	Hole Option	10
2.	Use LSN50 with LoRaWAN firmware	11
2.1	How it works	11
2.2	Quick guide to connect to LoRaWAN server (OTAA)	13
2.3	Working Mode & Uplink Payload	17
2.3.1	MOD=1 (Default Mode)	17
2.3.2	MOD=2 (Distance Mode)	18
2.3.3	MOD=3 (3 ADC + I2C)	22
2.3.4	MOD=4 (3 x DS18B20)	22
2.3.5	MOD=5 (Weight Measurement by HX711)	23
2.3.6	MOD=6 (Counting Mode, Since firmware v1.6.5)	26
2.3.7	Decode payload in The Things Network	27
2.4	Payload Explanation and Sensor Interface	28
2.4.1	Battery Info	28
2.4.2	Temperature (DS18B20)	28
2.4.3	Digital Input	28
2.4.4	Analogue Digital Converter (ADC)	29
2.4.5	Digital Interrupt	31
2.4.6	I2C Interface (SHT20)	34
2.4.7	Distance Reading	35
2.4.8	Ultrasonic Sensor	35
2.4.9	+5V Output	36
2.4.10	Weigh Sensor HX711	37
2.4.11	BH1750 Illumination Sensor	37
2.4.12	Working MOD	37
2.5	Configure LSN50 via AT or Downlink	39
2.5.1	Common Commands:	39
2.5.2	Sensor related commands:	39
2.6	Show Data in Mydevices IoT Server	41
2.7	Firmware Change Log	44
2.8	Use VDD or +5V to Power External Sensor	44
2.9	Battery Analysis	45

---

2.9.1	Battery Type	45
2.9.2	Power consumption Analyze	45
2.9.3	Battery Note	47
2.9.4	Replace the battery	47
3.	Using the AT Commands	47
3.1	Access AT Commands	47
3.2	Common AT Command Sequence	49
3.2.1	Multi-channel ABP mode (Use with SX1301/LG308)	49
3.2.2	Single-channel ABP mode (Use with LG01/LG02)	49
4.	Upload Firmware	50
4.1	Upload Firmware via Serial Port	50
4.2	Upload Firmware via ST-Link V2	53
5.	Developer Guide	55
6.	FAQ	57
6.1	Why there is 433/868/915 version?	57
6.2	What is the frequency range of LT LoRa part?	57
6.3	How to change the LoRa Frequency Bands/Region?	57
6.4	Can I use Private LoRa protocol?	57
6.5	How to set up LSN50 to work in 8 channel mode	58
6.6	How to set up LSN50 to work with Single Channel Gateway such as LG01/LG02?	60
6.7	How to configure the EUI keys in LSN50?	61
7.	Trouble Shooting	62
7.1	Connection problem when uploading firmware.	62
7.2	Why I can't join TTN in US915 / AU915 bands?	62
7.3	AT Command input doesn't work	63
8.	Order Info	64
9.	Packing Info	64
10.	Support	65
11.	References	65

## 1. Introduction

### 1.1 What is LSN50 LoRa Sensor Node


LSN50 is a Long Range LoRaWAN Sensor Node. It is designed for **outdoor data logging** and powered by **Li/SOCI2 battery** for long term use and secure data transmission. It is designed to facilitate developers to quickly deploy industrial level LoRa and IoT solutions. It helps users to turn the idea into a practical application and make the Internet of Things a reality. It is easy to program, create and connect your things everywhere.

It is based on SX1276/SX1278 allows the user to send data and reach extremely long ranges at low data-rates. It provides ultra-long range spread spectrum communication and high interference immunity whilst minimizing current consumption. It targets professional wireless sensor network applications such as irrigation systems, smart metering, smart cities, smartphone detection, building automation, and so on.

**LSN50** uses STM32L0x chip from ST, STM32L0x is the **ultra-low-power** STM32L072xx microcontrollers incorporate the connectivity power of the universal serial bus (USB 2.0 crystal-less) with the high-performance ARM® Cortex®-M0+ 32-bit RISC core operating at a 32 MHz frequency, a memory protection unit (MPU), high-speed embedded memories (192 Kbytes of Flash program memory, 6 Kbytes of data EEPROM and 20 Kbytes of RAM) plus an extensive range of enhanced I/Os and peripherals.

LSN50 is an **open source product**, it is based on the STM32Cube HAL drivers and lots of libraries can be found in ST site for rapid development.

#### LSN50 Network Structure

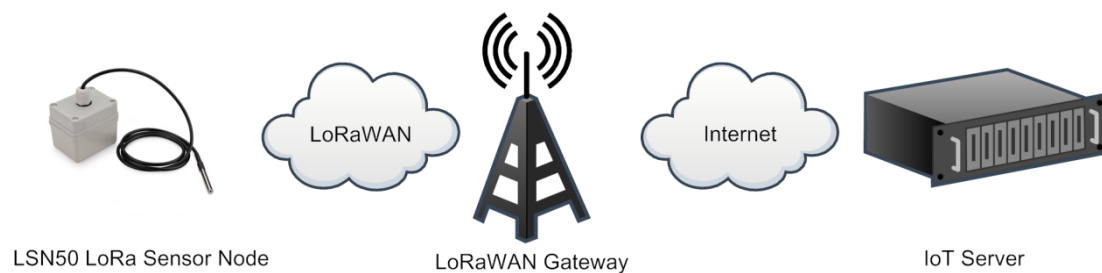

## 1.2 Specifications

### Micro Controller:

- STM32L072CZT6 MCU
- MCU: STM32L072CZT6
- Flash: 192KB
- RAM: 20KB
- EEPROM: 6KB
- Clock Speed: 32Mhz

### Common DC Characteristics:

- Supply Voltage: 2.1v ~ 3.6v
- Operating Temperature: -40 ~ 85°C
- I/O pins: Refer to STM32L072 datasheet

### LoRa Spec:

- Frequency Range,
  - Band 1 (HF): 862 ~ 1020 Mhz
  - or
  - Band 2 (LF): 410 ~ 528 Mhz
- 168 dB maximum link budget.
- +20 dBm - 100 mW constant RF output vs.
- +14 dBm high efficiency PA.
- Programmable bit rate up to 300 kbps.
- High sensitivity: down to -148 dBm.
- Bullet-proof front end: IIP3 = -12.5 dBm.
- Excellent blocking immunity.
- Low RX current of 10.3 mA, 200 nA register retention.
- Fully integrated synthesizer with a resolution of 61 Hz.
- FSK, GFSK, MSK, GMSK, LoRaTM and OOK modulation.
- Built-in bit synchronizer for clock recovery.
- Preamble detection.
- 127 dB Dynamic Range RSSI.
- Automatic RF Sense and CAD with ultra-fast AFC.
- Packet engine up to 256 bytes with CRC.
- LoRaWAN 1.0.2 Specification

### Battery:

- Li/SOCI2 un-chargeable battery
- Capacity: 4000mAh
- Self Discharge: <1% / Year @ 25°C
- Max continuously current: 130mA
- Max boost current: 2A, 1 second

### Power Consumption

- STOP Mode: 2.7uA @ 3.3v
- LoRa Transmit Mode: 125mA @ 20dBm 44mA @ 14dBm

## 1.3 Features


- LoRaWAN 1.0.3 Class A, Class C
- STM32L072CZT6 MCU
- SX1276/78 Wireless Chip
- Pre-load bootloader on USART1/USART2
- MDK-ARM Version 5.24a IDE
- I2C, LPUSART1, USB, SPI2
- 3x12bit ADC, 1x12bit DAC
- 20xDigital I/Os
- LoRa™ Modem
- Preamble detection
- Baud rate configurable
- CN470/EU433/KR920/US915/IN865
- EU868/AS923/AU915
- Open-source hardware / software
- Available Band:433/868/915/920 Mhz
- IP66 Waterproof Enclosure
- Ultra-Low Power consumption
- AT Commands to change parameters
- 4000mAh or 8500mAh Battery for long term use

## 1.4 Applications


- Smart Buildings & Home Automation
- Logistics and Supply Chain Management
- Smart Metering
- Smart Agriculture
- Smart Cities
- Smart Factory

### 1.5 Pin Definitions and Switch

**LSN50 v1.2**  
Pin Definition

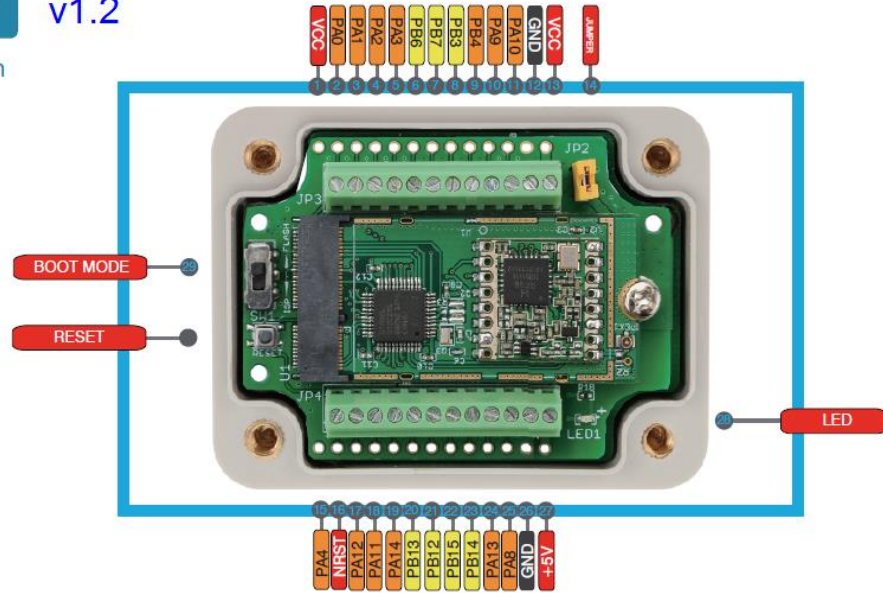

**LSN50 v2**  
Pin Definition

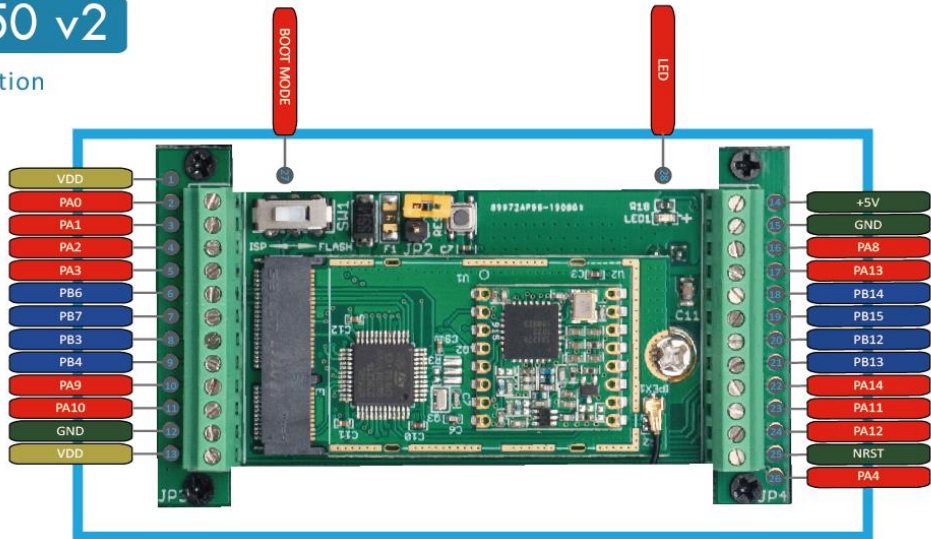

No.	Signal	Direction	Function	Remark
1	VDD (3v)	OUTPUT	VCC	Directly connect to main power for board
2	PA0	In/Out	Directly from STM32 chip	Used as ADC in LSN50 image
3	PA1	In/Out	Directly from STM32 chip	
4	PA2	In/Out	Directly from STM32 chip, 10k pull up to VCC	Used as UART_TXD in LSN50 image
5	PA3	In/Out	Directly from STM32 chip, 10k pull up to VCC	Used as UART_RXD in LSN50 image

6	PB6	In/Out	Directly from STM32 chip, 10k pull up to VCC	
7	PB7	In/Out	Directly from STM32 chip, 10k pull up to VCC	
8	PB3	In/Out	Directly from STM32 chip, 10k pull up to VCC	
9	PB4	In/Out	Directly from STM32 chip	
10	PA9	In/Out	Directly from STM32 chip, 10k pull up to VCC	
11	PA10	In/Out	Directly from STM32 chip, 10k pull up to VCC	
12	GND		Ground	
13	VCC(2.9V)	OUTPUT	VCC	Directly connect to main power for board
14	Jumper		Power on/off jumper	
15	PA4	In/Out	Directly from STM32 chip	
16	NRST	In	Reset MCU	
17	PA12	In/Out	Directly from STM32 chip	
18	PA11	In/Out	Directly from STM32 chip	
19	PA14	In/Out	Directly from STM32 chip	
20	PB13	In/Out	Directly from STM32 chip	
21	PB12	In/Out	Directly from STM32 chip	
22	PB15	In/Out	Directly from STM32 chip	
23	PB14	In/Out	Directly from STM32 chip	
24	PA13	In/Out	Directly from STM32 chip	
25	PA8	In/Out	Directly from STM32 chip	Default use to turn on/off LED1 in LSN50 image
26	GND		Ground	
27	+5V	Out	5v output power	Controlled by PB5(Low to Enable, High to Disable)
28	LED1		Controlled by PA8	Blink on transmit
29	BOOT MODE/ SW1		Configure device in working mode or ISP program mode	Flash: Normal Working mode and send AT Commands ISP: UART Program Mode
30	NRST	In	Reset MCU	

### 1.5.1 Jumper JP2

Power on Device when put this jumper.

### 1.5.2 BOOT MODE / SW1

- 1) ISP: upgrade mode, device won't have any signal in this mode. but ready for upgrade firmware. LED won't work. Firmware won't run.
- 2) Flash: work mode, device starts to work and send out console output for further debug



### 1.5.3 Reset Button

Press to reboot the device.

### 1.5.4 LED

It will flash:

- 1) When boot the device in flash mode
- 2) Send an uplink packet

## 1.6 Hardware Change log

### LSN50 v2.1:

1. Change R14 to 1M ohm
2. Change R3, R4 to 4.7Kohm. So no need to modify them for 3 DS18B20 connection.
3. Add ESD to each I/O

### LSN50 v2.0:

- Change to a new enclosure. Improve with external antenna, IP68, ear hook.

### LSN50 v1.3:

- Add P-MOS to control 5V output

### LSN50 v1.2:

- Add LED. Turn on for every LoRa transmit
- Add pin PA4, PB13, NRST
- Add 5V Output, on/off control by PB5(Low to Enable, High to Disable)

## 1.7 Hole Option


The LSN50 provides different hole size options for different size sensor cable. The options provided are M12, M16 and M20. The definition is as below:





多项国际质量认证



品质保证放心使用

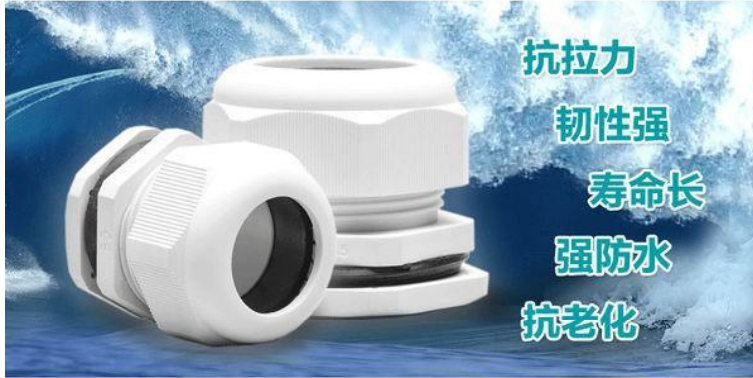

### 产品结构 Structure

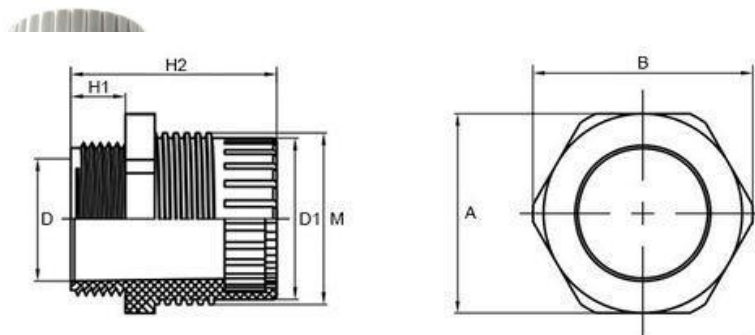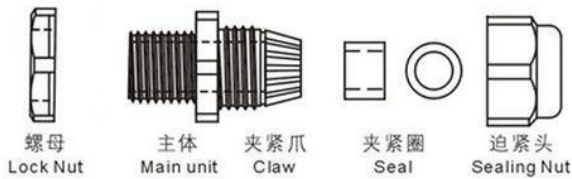

单位: mm


MODEL	H1	H2	M	M1	D	D1	A	B
M12*1.5	8	28.3	12.0	12.0	10.4	8.5 ± 0.2	16 ± 0.2	18 ± 0.2
M16*1.5	8	30.7	15.1	16.0	13.5	10.9 ± 0.2	18.8 ± 0.2	20.6 ± 0.2
M20*1.5	9	34.0	20.2	20.0	18.7	16.2 ± 0.2	22.8 ± 0.2	25.2 ± 0.2

## 2. Use LSN50 with LoRaWAN firmware

### 2.1 How it works

The LSN50 is pre-loaded with a firmware and is configured as LoRaWAN OTAA Class A mode by default. It has OTAA keys to join LoRaWAN network. To connect a local LoRaWAN network, you just need to input the OTAA keys in the LoRaWAN IoT server and power on the LSN50. It will automatically join the network via OTAA.

The diagram below shows the working flow in default firmware (ver 1.7.0):

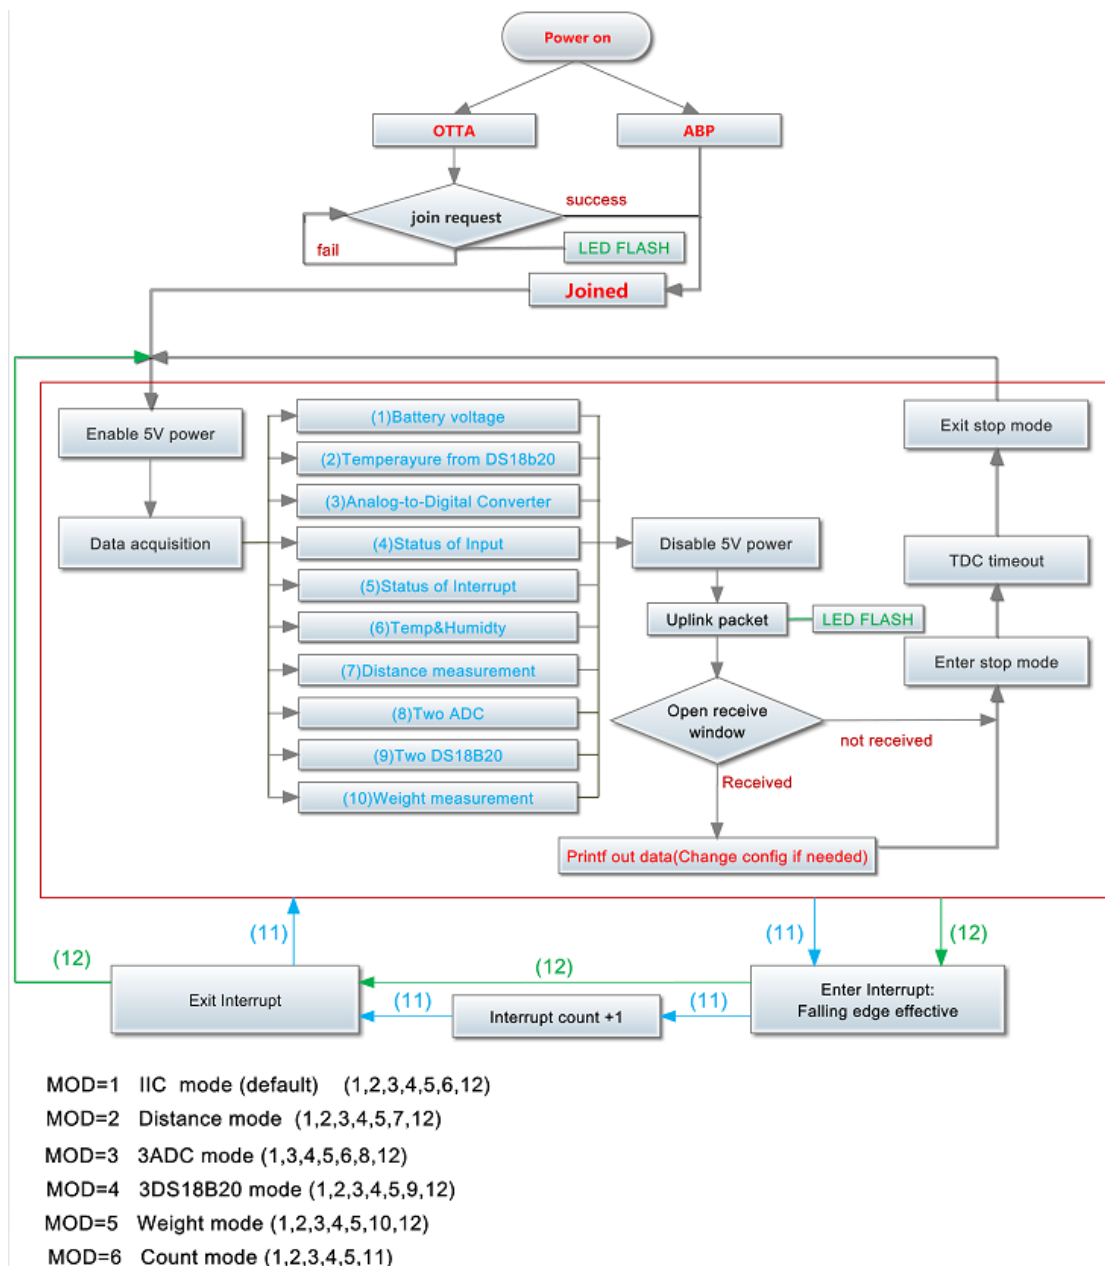

In case you can't set the OTAA keys in the LoRaWAN OTAA server, and you have to use the keys from the server, you can [use AT Commands](#) to set the keys in the LSN50.



## 2.2 Quick guide to connect to LoRaWAN server (OTAA)

Following is an example for how to join the [TTN LoRaWAN Network](#). Below is the network structure; we use the [LG308](#) as a LoRaWAN gateway in this example.

### LSN50 in a LoRaWAN Network




The LG308 is already set to connected to [TTN network](#), so what we need to now is configure the TTN server.


**Step 1:** Create a device in TTN with the OTAA keys from LSN50.  
Each LSN50 is shipped with a sticker with the default device EUI as below:

You can enter this key in the LoRaWAN Server portal. Below is TTN screen shot:

### Add APP EUI in the application

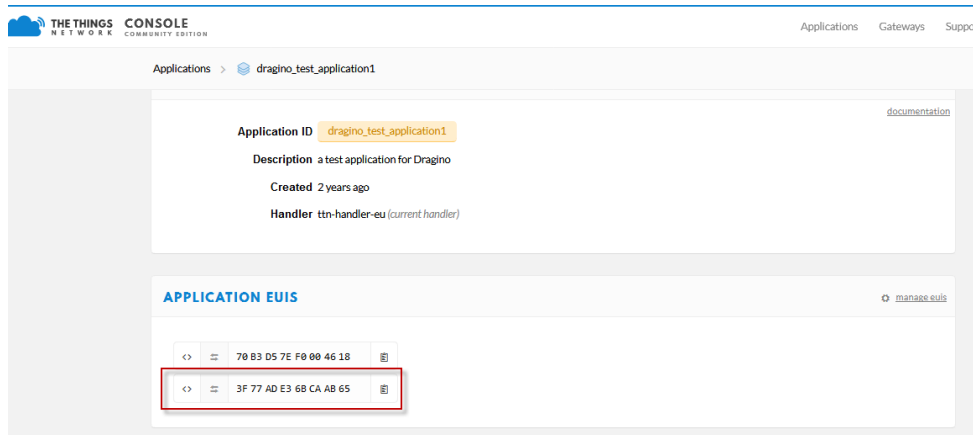


### Add APP KEY and DEV EUI

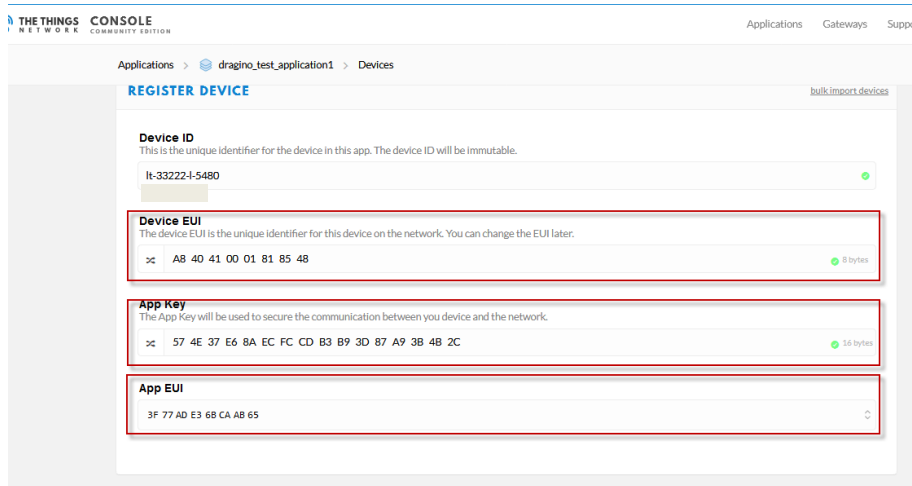


**Step 2: Power on LSN50**

Put a Jumper on JP2 to power on the device.

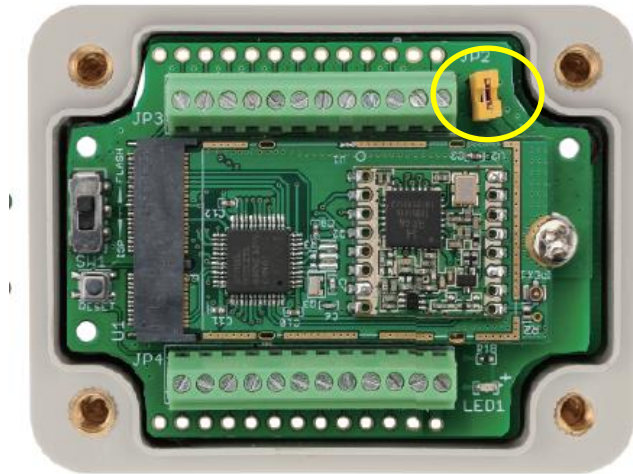

For LSn50v2:

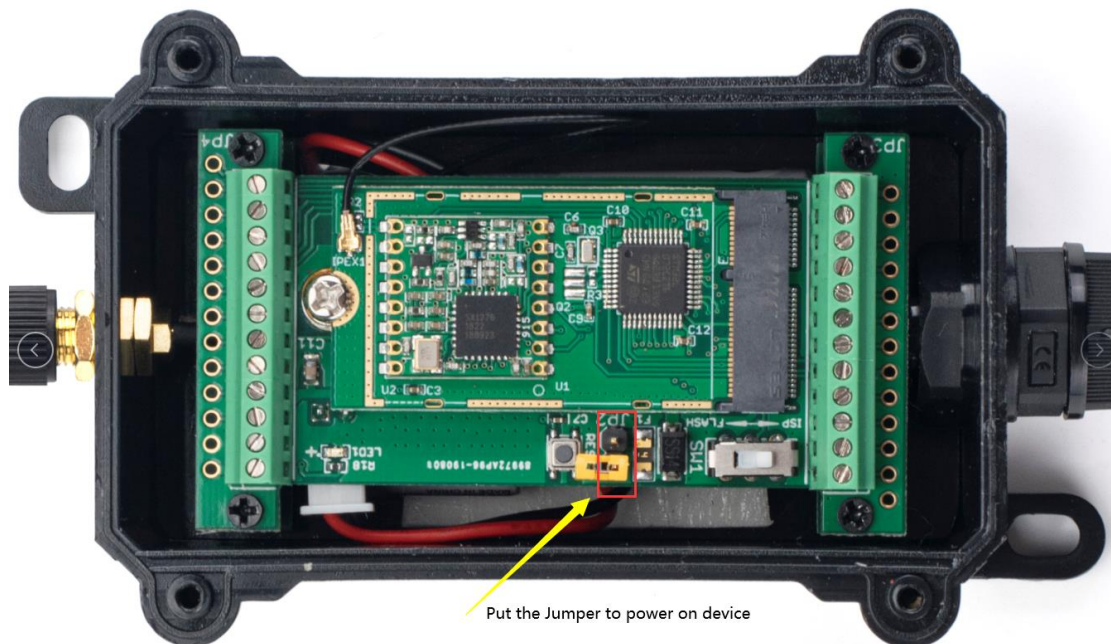

**Step 3:** The LSN50 will auto join to the TTN network. After join success, it will start to upload messages to TTN and you can see the messages in the panel.

### APPLICATION DATA

Filters: [uplink](#) [downlink](#) [activation](#) [ack](#) [error](#)

time	counter	port	dev id: <a href="#">lsn50</a>	payload:
13:46:38	4	2	dev id: <a href="#">lsn50</a>	0B 54 00 00 00 00 00 00 FC 02 05
13:46:26	3	2	dev id: <a href="#">lsn50</a>	0B 54 00 00 00 02 00 00 FF 01 FE
13:46:14	2	2	dev id: <a href="#">lsn50</a>	0B 54 00 00 00 0C 00 01 03 01 F4
13:46:02	1	2	dev id: <a href="#">lsn50</a>	0B 58 00 00 00 02 00 01 08 01 E9
13:45:50	0	2	dev id: <a href="#">lsn50</a>	0B 58 00 00 00 00 00 01 0D 01 E1

Annotations for the first row (13:46:38):

- Battery Info**: points to the 0B 54 bytes.
- Temperature (DS18B20)**: points to the 00 00 bytes.
- ADC**: points to the 00 00 bytes.
- Digital Input and Digital Interrupt**: points to the 00 00 bytes.
- Temperature (SHT20 or SHT31)**: points to the FC 02 bytes.
- Humidity (SHT20 or SHT31)**: points to the 02 05 bytes.



## 2.3 Working Mode & Uplink Payload

LSN50 has different working mode for the connections of different type of sensors. This section describes these modes. Use can use the AT Command AT+MOD to set LSN50 to different working modes.

For example:

**AT+MOD=2 //** will set the LSN50 to work in MOD=2 distance mode which target to measure distance via Ultrasonic Sensor.

**NOTE:**

1. Some working modes has payload more than 12 bytes, The US915/AU915/AS923 frequency bands' definition has maximum 11 bytes in **DR0**. Server sides will see NULL payload while LSn50 transmit in DR0 with 12 bytes payload.
2. All modes share the same Payload Explanation from [HERE](#).
3. By default, the device will send an uplink message every 5 minutes.

### 2.3.1 MOD=1 (Default Mode)

In this mode, uplink payload includes in total 11 bytes. Uplink packets use FPORT=2.

Size(bytes )	2	2	2	1	2	2
Value	BAT	Temperature (DS18B20)	ADC	Digital in & Digital Interrupt	Temperature (SHT20 or SHT31 or Ultrasonic Sensor)	Humidity (SHT20)

The screenshot shows the 'APPLICATION DATA' section in the The Things Network Console. It displays a table of uplink data points for a device with ID 'lsn50'. The table columns are time, counter, port, dev id, and payload. The first row shows a payload: 0B 54 00 00 00 00 00 FC 02 05. Red arrows point from specific bytes in the payload to callout boxes: '0B' to 'Battery Info', '54' to 'Temperature (DS18B20)', '00' to 'ADC', '00' to 'Digital Input and Digital Interrupt', 'FC' to 'Temperature (SHT20 or SHT31)', and '02' to 'Humidity (SHT20 or SHT31)'.

### 2.3.2 MOD=2 (Distance Mode)

This mode is target to measure the distance. The payload of this mode is totally 11 bytes. The 8<sup>th</sup> and 9<sup>th</sup> bytes is for the distance.

Size(bytes)	2	2	2	1	2	2
Value	BA T	Temperature (DS18B20)	ADC	Digital in & Digital Interrupt	Distance measure by: 1) LIDAR-Lite V3HP Or 2) Ultrasonic Sensor	Reserved

Applications > engineer-lin > Data

Overview Devices Payload Formats Inte

#### APPLICATION DATA

Filters:  uplink  downlink  activation  ack  error

time	counter	port	Battery Info	Temperature (DS18B20)	ADC	Digital Input and Digital Interrupt	Distance	Reserved
▲ 09:28:09	4	2	dev id: lsn50	payload: 0A E0 00 00 00 C2 04 0D 70 FF FF				
▲ 09:27:39	3	2	dev id: lsn50	payload: 0A DE 00 00 00 BA 04 0D 5C FF FF				
▲ 09:27:09	2	2	dev id: lsn50	payload: 0A E0 00 00 00 C6 04 0D 66 FF FF				
▲ 09:26:39	1	2	dev id: lsn50	payload: 0A E0 00 00 00 CE 04 0D 8E FF FF				
▲ 09:26:09	0	2	dev id: lsn50	payload: 0A E6 00 00 00 CE 04 0D 52 FF FF				

Connection of LIDAR-Lite V3HP:



Connection to Ultrasonic Sensor:





For the connection to TF-Mini or TF-Luna , MOD2 payload is as below:

Size(bytes)	2	2	1	2	2	2
Value	BAT	Temperature (DS18B20)	Digital in & Digital Interrupt	ADC	Distance measure by: 1)TF-Mini plus LiDAR Or 2) TF-Luna LiDAR	Distance signal strength

Applications > engineer-lin > Data

Overview Devices Payload Formats Inte

### APPLICATION DATA


Filters: uplink downlink activation ack error

time	counter	port	dev id	payload
14:07:06	4	2	lsn50	0C BF 00 00 01 0C 04 0E 2E 00 B1
14:06:36	3	2	lsn50	0C E4 00 00 00 F5 04 0D FC 00 A8
14:06:06	2	2	lsn50	0C E6 00 00 00 F1 04 0E 24 00 AE
14:05:36	1	2	lsn50	0CD9 00 00 00 DD04 0E 06 00 B8
14:05:07	0	2	retry lsn50	0C E2 00 00 00 FB 04 0D E8 00 AE

Annotations: Battery Info, Temperature (DS18B20), ADC, Digital Input and Digital Interrupt, Distance, Distance signal strength


Connection to [TF-Mini plus](#) LiDAR(UART version):

Need to remove R3 and R4 resistors to get low power. Since firmware v1.7.0

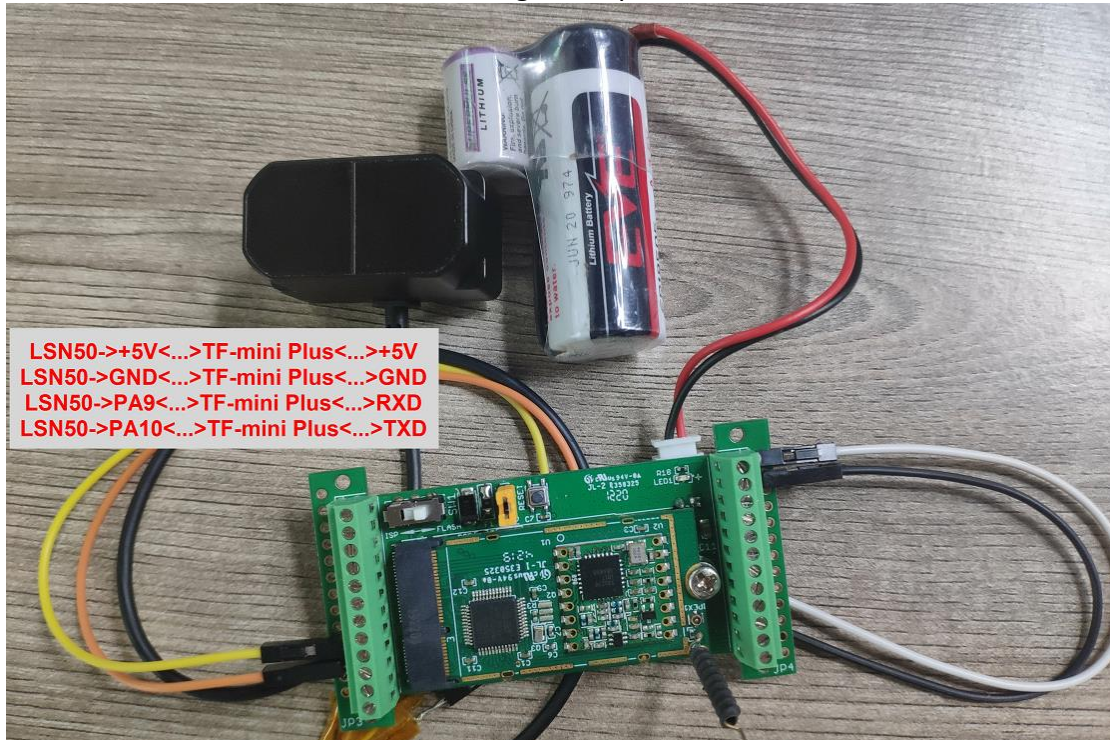

Connection to [TF-Luna](#) LiDAR (UART version):

Need to remove R3 and R4 resistors to get low power. Since firmware v1.7.0

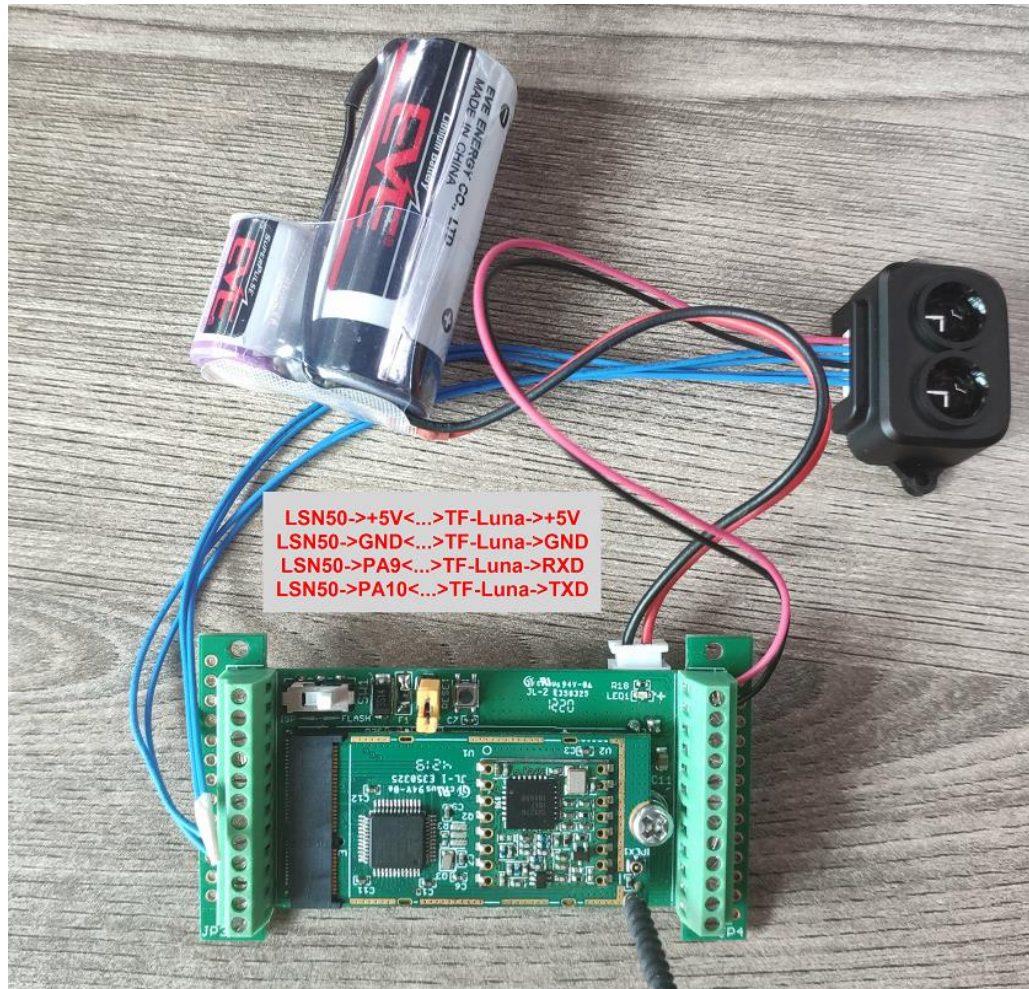

Please use firmware version > 1.6.5 when use MOD=2, in this firmware version, user can use LSn50 v1 to power the ultrasonic sensor directly and with low power consumption.

### 2.3.3 MOD=3 (3 ADC + I2C)

This mode has total 12 bytes. Include 3 x ADC + 1x I2C

Size(bytes)	2	2	2	1	2	2	1
Value	ADC1 (Pin PA0)	ADC2 (PA1)	ADC3 (PA4)	Digital in & Digital Interrupt	Temperature (SHT20 or SHT31)	Humidity (SHT20 or SHT31)	BAT

**APPLICATION DATA**

Filters:


time	counter	port	dev id: <a href="#">lsn50</a>	payload:
09:36:43	4	2	<a href="#">lsn50</a>	00DB010700C108011F02501C
09:36:13	3	2	<a href="#">lsn50</a>	00D1011300C108011F023B1C
09:35:43	2	2	<a href="#">lsn50</a>	00C2011D00C708011F023B1C
09:35:13	1	2	<a href="#">lsn50</a>	00C4010F00C3080120024B1C
09:34:43	0	2	<a href="#">lsn50</a>	00DA013100C2080120023E1C

### 2.3.4 MOD=4 (3 x DS18B20)

This mode is supported in firmware version since v1.6.1

Hardware connection is as below, (Note: R3 & R4 should change from 10k to 4.7k to support DS18B20, Software set to AT+MOD=4)



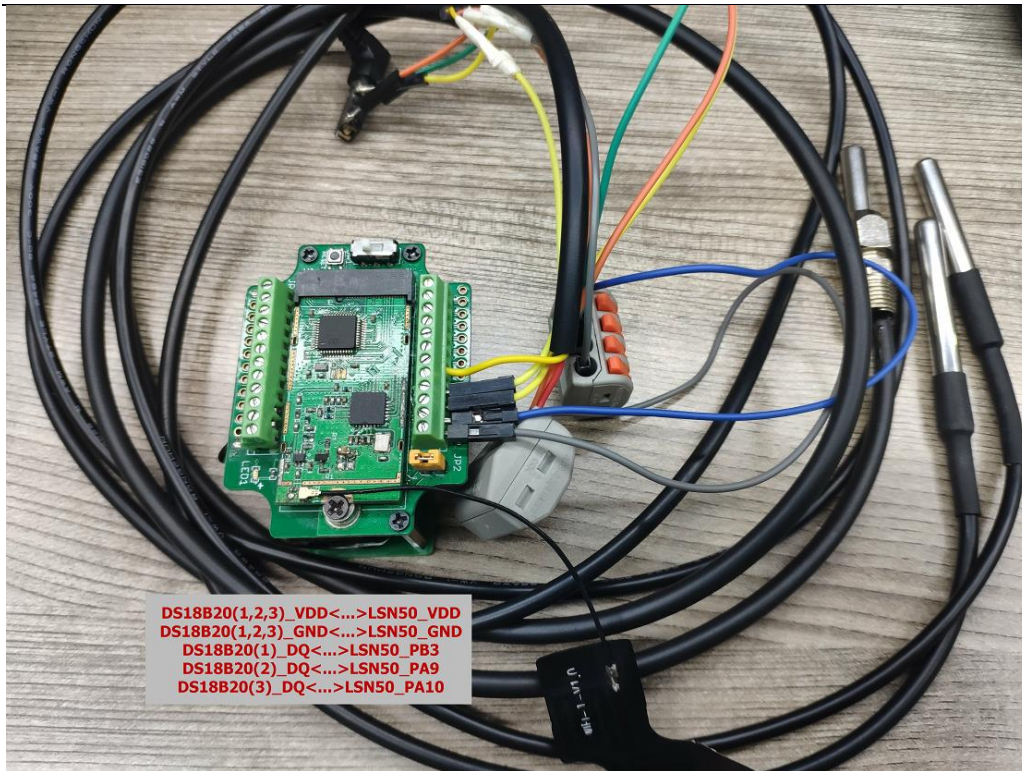

This mode has total 11 bytes. As shown below:

Size(bytes)	2	2	2	1	2	2
Value	BAT	Temperature1 (DS18B20) (PB3)	ADC	Digital in & Digital Interrupt	Temperature2 (DS18B20) (PA9)	Temperature3 (DS18B20) (PA10)

THE THINGS NETWORK CONSOLE COMMUNITY EDITION

Applications > engineer-lin > Data

Overview Devices Payload Formats Integrat

**APPLICATION DATA**

Filters: uplink downlink activation ack error

time counter port dev id: lsn50 payload: 0D 93 01 1A 01 00 00 01 1B 01 17

Annotations: Battery Info, Temperature1 (DS18B20), ADC, Digital Input and Digital Interrupt, Temperature2 (DS18B20), Temperature3 (DS18B20)

time	counter	port	dev id	payload
09:00:57	4	2	lsn50	0D 93 01 1A 01 00 00 01 1B 01 17
09:00:27	3	2	lsn50	0D 93 01 1A 01 03 90 01 1A 01 17
08:59:57	2	2	lsn50	0D 93 01 1A 01 06 90 01 19 01 17
08:59:27	1	2	lsn50	0D 93 01 1A 01 06 90 01 1A 01 17
08:58:58	0	2	lsn50	0D 93 01 1A 01 09 90 01 1B 01 17

### 2.3.5 MOD=5(Weight Measurement by HX711)

This mode is supported in firmware version since v1.6.2. Please use v1.6.5 firmware version so user no need to use extra LDO for connection.



Each HX711 need to be calibrated before used. User need to do below two steps:

- a) Zero calibration. Don't put anything on load cell and run **AT+WEIGRE** to calibrate to Zero gram.
- b) Adjust calibration factor (default value 400): Put a known weight thing on load cell and run **AT+WEIGAP** to adjust the Calibration Factor.

For example:

**AT+WEIGAP =403.0**

Response: Weight is 401 g

Check the response of this command and adjust the value to match the real value for thing.

Size(bytes)	2	2	2	1	2	2
Value	<a href="#">BAT</a>	<a href="#">Temperature (DS18B20)</a>	<a href="#">ADC</a>	<a href="#">Digital in &amp; Digital Interrupt</a>	Weight	Reserved



**APPLICATION DATA**

Filters

- uplink
- downlink
- activation
- ack
- error

time counter port

time	counter	port	dev id:	payload:
▲ 10:41:10	4	2	lsn50	0C E9 00 00 00 FB 05 00 F0 FF FF
▲ 10:40:40	3	2	lsn50	0C E9 00 00 01 0B 05 00 EF FF FF
▲ 10:40:10	2	2	lsn50	0C E5 00 00 00 FB 05 00 EF FF FF
▲ 10:39:40	1	2	lsn50	0C E3 00 00 01 08 05 00 EF FF FF
▲ 10:39:10	0	2	retry lsn50	0D 0F 00 00 01 04 05 00 00 FF FF

Battery Info

Temperature (DS18B20)

ADC

Digital Input and Digital Interrupt


Weight

Reserved

### 2.3.6 MOD=6(Counting Mode, Since firmware v1.6.5)

In this mode, the device will work in counting mode. It counts the interrupt on the interrupt pins and sends the count on TDC time.

Connection is as below. The PIR sensor is a count sensor, it will generate interrupt when people come close or go away. User can replace the PIR sensor with other counting sensors.

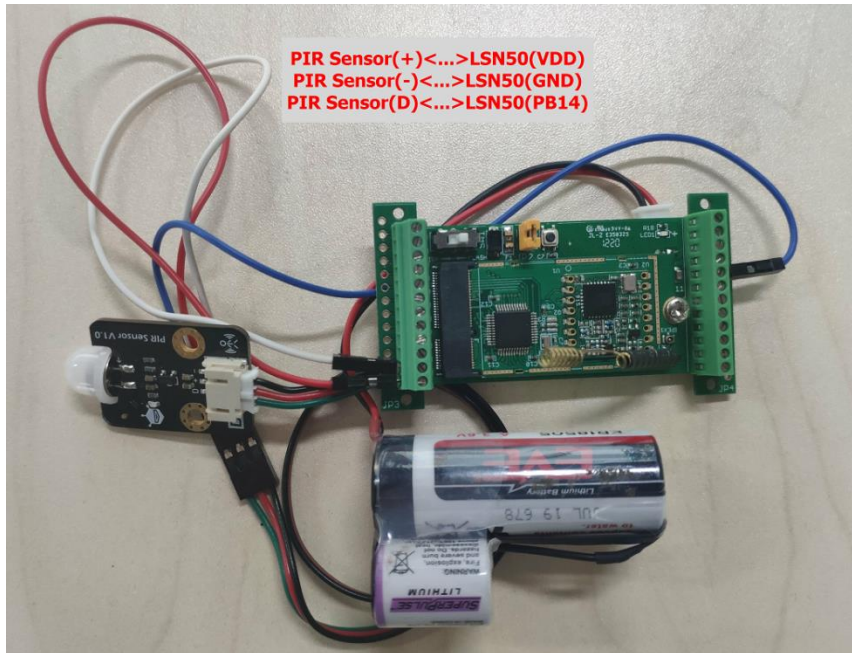

Note: LoRaWAN wireless transmission will infect the PIR sensor. Which cause the counting value increase +1 for every uplink. User can change PIR sensor or put sensor away of the LSN50 to avoid this happen.

Size(bytes)	2	2	2	1	4
Value	<a href="#">BAT</a>	<a href="#">Temperature (DS18B20)</a>	<a href="#">ADC</a>	<a href="#">Digital in</a>	Count

### APPLICATION DATA

Filters: [uplink](#) [downlink](#) [activation](#) [ack](#) [error](#) [Temperature \(DS18B20\)](#) [ADC](#) [Digital Input](#) [Count](#) [Battery Info](#)

time	counter	port	dev id:	payload:
▲ 12:48:15	4	2	dev id: <a href="#">lsn50</a>	payload: 0C FE 00 00 01 14 14 00 00 00 0B
▲ 12:47:45	3	2	dev id: <a href="#">lsn50</a>	payload: 0D 03 00 00 00 00 EF 14 00 00 00 08
▲ 12:47:15	2	2	dev id: <a href="#">lsn50</a>	payload: 0D 01 00 00 01 1B 14 00 00 00 05
▲ 12:46:45	1	2	dev id: <a href="#">lsn50</a>	payload: 0D 03 00 00 00 00 F4 14 00 00 00 01
▲ 12:46:15	0	2	dev id: <a href="#">lsn50</a>	payload: 0D 01 00 00 00 00 EA 14 00 00 00 00

### 2.3.7 Decode payload in The Things Network

While using TTN network, you can add the payload format to decode the payload.

[Applications](#) > [products\\_lsn50](#) > [Payload Formats](#)

Overview [Devices](#) [Payload Formats](#) [Integrations](#) [Data](#) [Settings](#)

#### PAYLOAD FORMATS

**Payload Format**  
The payload format sent by your devices

Custom

[decoder](#) [converter](#) [validator](#) [encoder](#) [remove decoder](#)

```

1 function Decoder(bytes, port) {
2   // Decode an uplink message from a buffer
3   // (array) of bytes to an object of fields.
4   var value=bytes[0]<<8 | bytes[1];
5   var batV=value/1000;//Battery,units:V
6
7   value=bytes[2]<<8 | bytes[3];
8   if(bytes[2] & 0xFC)

```

The payload decoder function for TTN are here:

LSN50 TTN Payload Decoder:

[http://www.dragino.com/downloads/downloads/LSN50-LoRaST/Payload\\_decoder/](http://www.dragino.com/downloads/downloads/LSN50-LoRaST/Payload_decoder/)

## 2.4 Payload Explanation and Sensor Interface

### 2.4.1 Battery Info

Check the battery voltage for LSN50.

Ex1: 0x0B45 = 2885mV


Ex2: 0x0B49 = 2889mV

### 2.4.2 Temperature (DS18B20)

If there is a DS18B20 connected to PB3 pin. The temperature will be uploaded in the payload.

More DS18B20 can check the [3 DS18B20 mode](#)

#### Connection

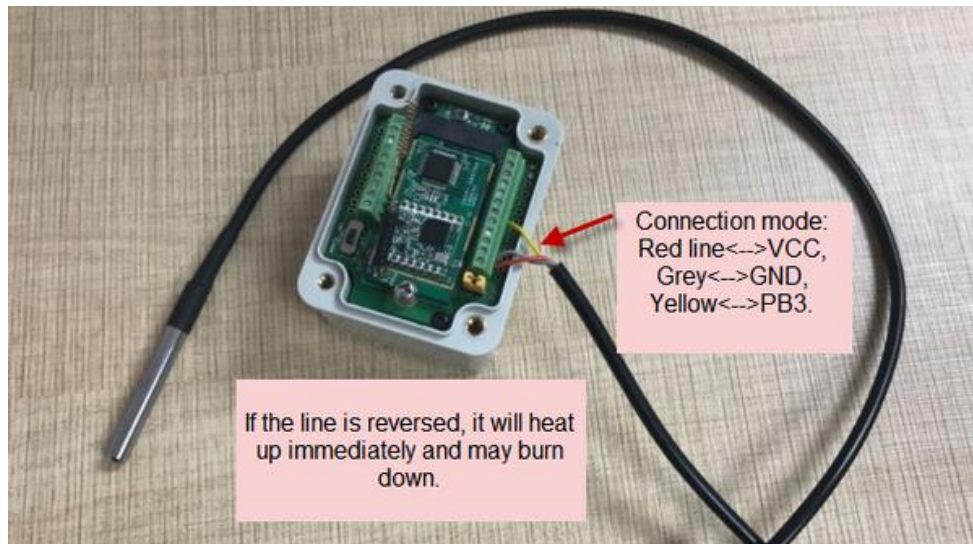

#### Example:

If payload is: 0105H: (0105 & FC00 == 0), temp = 0105H /10 = 26.1 degree

If payload is: FF3FH : (FF3F & FC00 == 1) , temp = (FF3FH - 65536)/10 = -19.3 degrees.

### 2.4.3 Digital Input

The digital input for pin PA12,

- When PA12 is high, the bit 1 of payload byte 6 is 1.
- When PA12 is low, the bit 1 of payload byte 6 is 0.


### 2.4.4 Analogue Digital Converter (ADC)

The ADC pins in LSN50 can measure range from 0~3.3v, it use reference voltage from STM32. If user need to measure a voltage >3.3v, please use resistors to divide this voltage to lower than 3.3v, otherwise, it may destroy the ADC pin.

The ADC monitors the voltage on the PA0 line, in mV.

Ex: 0x021F = 543mv,

**Example1:** Reading an Oil Sensor (Read a resistance value):

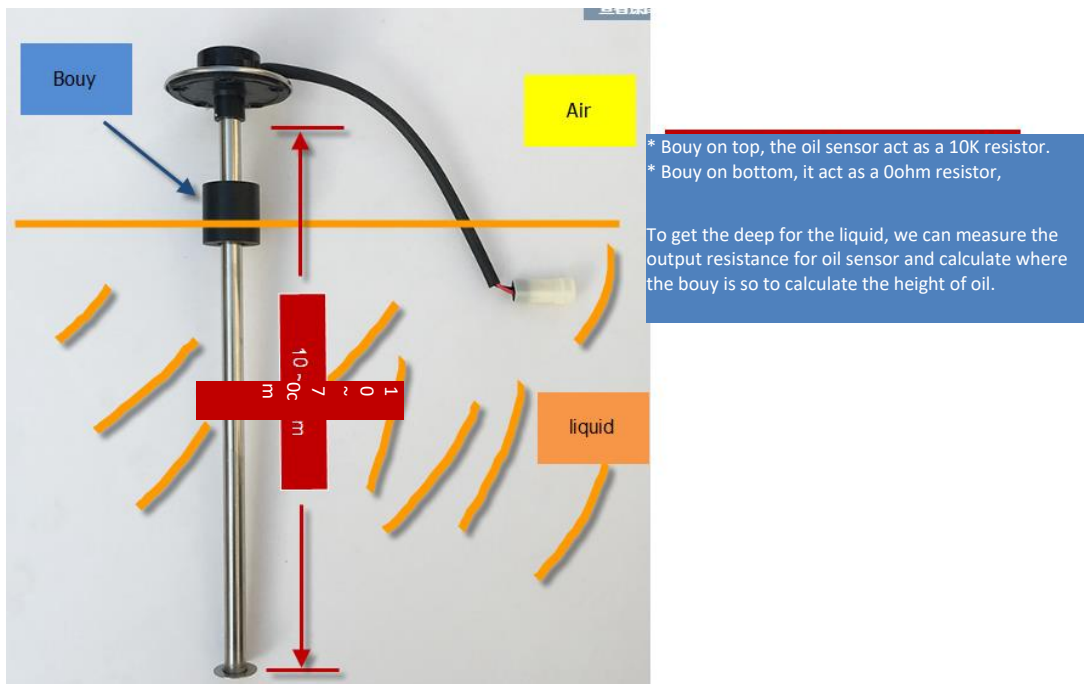


In the LSN50, we can use PB4 and PA0 pin to calculate the resistance for the oil sensor.

Steps:

1. Solder a 10K resistor between PA0 and VCC.
2. Screw oil sensor's two pins to PA0 and PB4.

The equipment circuit is as below:

Use LSN50 to measure a resistor

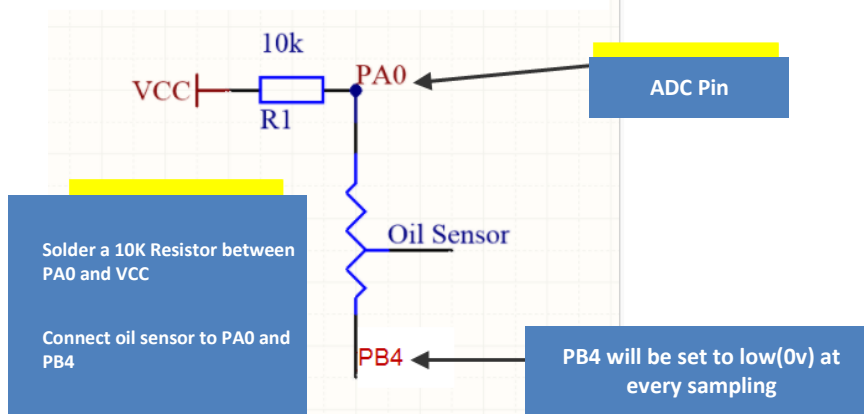

According to above diagram:

$$(VCC - V_{PA0}) \frac{10K}{R_{oil\_sensor}} = \frac{V_{PA0}}{R_{oil\_sensor}}$$

So

$$R_{oil\_sensor} = V_{PA0} \times 10 \frac{K}{(VCC - V_{PA0})}$$

$V_{PA0}$  is the reading of ADC. So if ADC=0x05DC=0.9 v and VCC (BAT) is 2.9v

$$\text{The } R_{oil\_sensor} = 0.9 \times \frac{10K}{2.9-0.9} = 4.5K \text{ ohm}$$


Since the Bouy is linear resistance from 10 ~ 70cm.

$$\text{The position of Bouy is } \frac{4.5K}{10K} \times (70cm - 10cm) + 10cm = 37cm, \text{ from the bottom of Bouy}$$

### 2.4.5 Digital Interrupt

Digital Interrupt refers to pin PB14, and there are different trigger methods. When there is a trigger, the LSN50 will send a packet to the server.

Interrupt connection method:

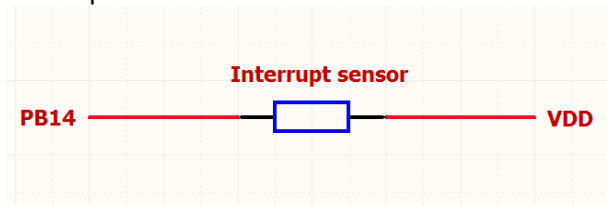


#### Example to use with door sensor

(Requires firmware > 1.5.1)

The door sensor is shown at right. It is a two wire magnetic contact switch used for detecting the open/close status of doors or windows.

When the two pieces are close to each other, the 2 wire output will be short or open (depending on the type), while if the two pieces are away from each other, the 2 wire output will be the opposite status. So we can use LSN50 interrupt interface to detect the status for the door or window.

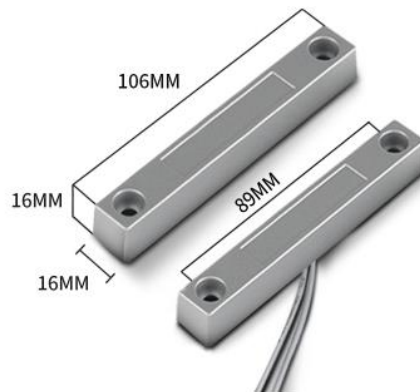

Below is the installation example:


Fix one piece of the magnetic sensor to the door and connect the two pins to LSN50 as follows:

- One pin to LSN50's PB14 pin
- The other pin to LSN50's VCC pin

Install the other piece to the door. Find a place where the two pieces will be close to each other when the door is closed. For this particular magnetic sensor, when the door is closed, the output will be short, and PB14 will be at the VCC voltage.

Door sensors have two types: **NC (Normal close)** and **NO (normal open)**. The connection for both type sensors are the same. But the decoding for payload are reverse, user need to modify this in the IoT Server decoder.

When door sensor is shorted, there will extra power consumption in the circuit, the extra current is  $3v3/R14 = 3v2/1M\text{ohm} = 0.3\mu\text{A}$  which can be ignored.

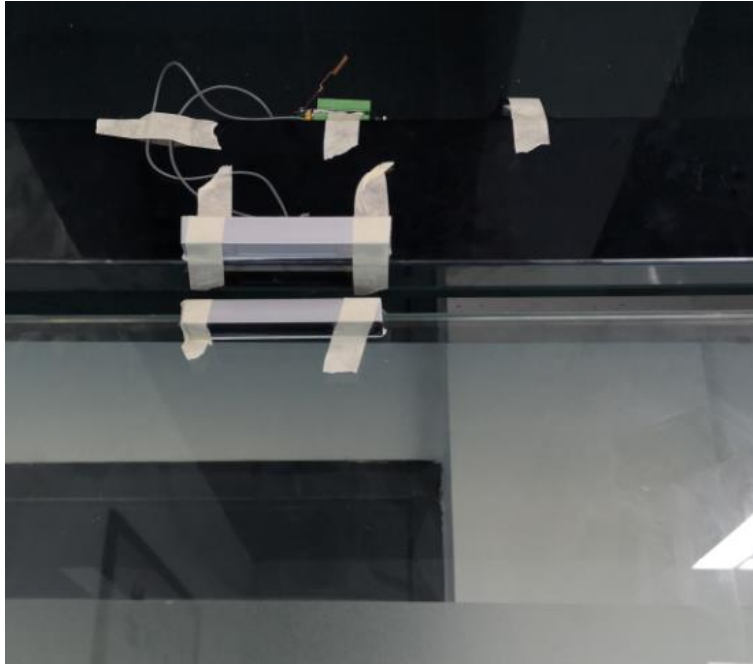

The above photos shows the two parts of the magnetic switch fitted to a door.

The software by default uses the falling edge on the signal line as an interrupt. We need to modify it to accept both the rising edge (0v --> VCC , door close) and the falling edge (VCC --> 0v , door open) as the interrupt.

The command is:

**AT+INTMOD=1** //(more info about INMOD please refer [AT Command Manual.](#) )

Below shows some screen captures in TTN:






In MOD=1, user can use byte 6 to see the status for door open or close. TTN decoder is as below:

```
door= (bytes[6] & 0x80)? "CLOSE":"OPEN";
```

**Notice for hardware version LSN50 v1 < v1.3** (produced before 2018-Nov).

In this hardware version, there is no R14 resistance solder. When use the latest firmware, it should set AT+INTMOD=0 to close the interrupt. If user need to use Interrupt in this hardware version, user need to solder R14 with 10M resistor and C1 (0.1uF) on board.

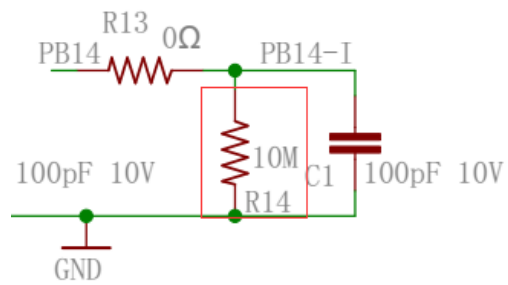


### 2.4.6 I2C Interface (SHT20)

The PB6(SDA) and PB7(SCK) are I2C interface lines. You can use these to connect to an I2C device and get the sensor data.

We have made an example to show how to use the I2C interface to connect to the SHT20 Temperature and Humidity Sensor. This is supported in the stock firmware since v1.5 with **AT+MOD=1 (default value)**.

Below is the connection to SHT20.

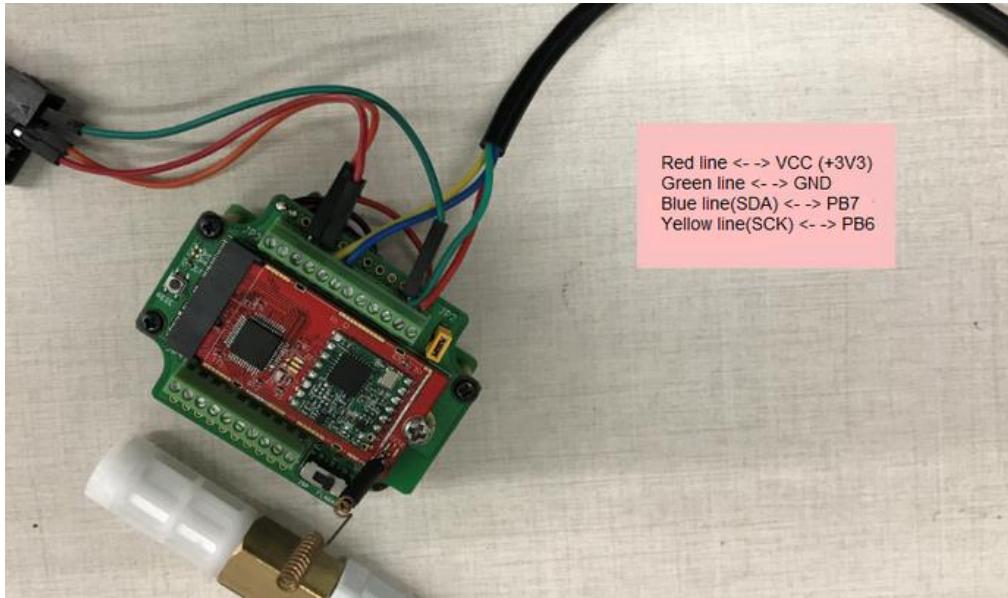

The device will be able to get the I2C sensor data now and upload to IoT Server.

time	counter	port	payload	Temperature	Humidity
14:37:16	26	2	payload: 0B 21 00 00 00 00 00 00 01 16 02 47	01 16	02 47
14:37:06	25	2	payload: 0B 21 00 00 00 00 00 00 01 16 02 48	01 16	02 48
14:36:56	24	2	payload: 0B 21 00 00 00 00 00 00 01 16 02 48	01 16	02 48
14:36:46	23	2	payload: 0B 22 00 00 00 00 00 00 01 17 02 49	01 17	02 49
14:36:36	22	2	payload: 0B 21 00 00 00 00 00 00 01 17 02 49	01 17	02 49
14:36:25	21	2	payload: 0B 21 00 00 00 00 00 00 01 17 02 4A	01 17	02 4A
14:36:15	20	2	payload: 0B 22 00 00 00 00 00 00 01 17 02 4A	01 17	02 4A

Convert the read byte to decimal and divide it by ten.

**Example:**

Temperature: Read:0116(H) = 278(D) Value: 278 /10=27.8°C;  
 Humidity: Read:0248(H)=584(D) Value: 584 / 10=58.4, So 58.4%

If you want to use other I2C device, please refer the SHT20 part source code as reference.

### 2.4.7 Distance Reading

Refer [Ultrasonic Sensor section](#).

### 2.4.8 Ultrasonic Sensor

The LSN50 v1.5 firmware supports ultrasonic sensor (with AT+MOD=2) such as SEN0208 from DF-Robot. This Fundamental Principles of this sensor can be found at this link:

[https://wiki.dfrobot.com/Weather - proof Ultrasonic Sensor with Separate Probe SKU SEN0208](https://wiki.dfrobot.com/Weather_-_proof_Ultrasonic_Sensor_with_Separate_Probe_SKU_SEN0208)

The LSN50 detects the pulse width of the sensor and converts it to mm output. The accuracy will be within 1 centimeter. The usable range (the distance between the ultrasonic probe and the measured object) is between 24cm and 600cm.


The picture below shows the connection:



Connect to the LSN50 and run **AT+MOD=2** to switch to ultrasonic mode (ULT). The ultrasonic sensor uses the 8<sup>th</sup> and 9<sup>th</sup> byte for the measurement value.

**Example:**

Distance: Read:0C2D(Hex) = 3117(D) Value: 3117 mm=311.7 cm

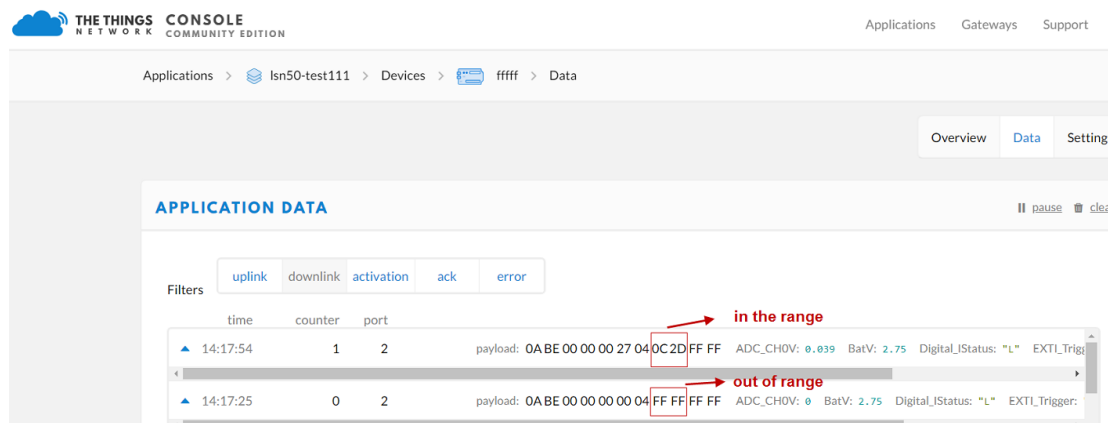

You can see the serial output in ULT mode as below:

```


LSN50 Device
Image Version: v1.4
Frequency Band: EU868
DevEui= 00 97 16 CF B8 37 CF 4E

***** UpLinkCounter= 0 *****
TX on freq 868300000 Hz at DR 5
txDone
rxDone
JOINED
Distance is out of range

***** UpLinkCounter= 0 *****
TX on freq 867700000 Hz at DR 0
txDone
rxTimeOut
rxTimeOut
Distance=3117 mm

***** UpLinkCounter= 1 *****
TX on freq 868100000 Hz at DR 0
txDone
rxTimeOut
rxDone
    
```

In TTN server:

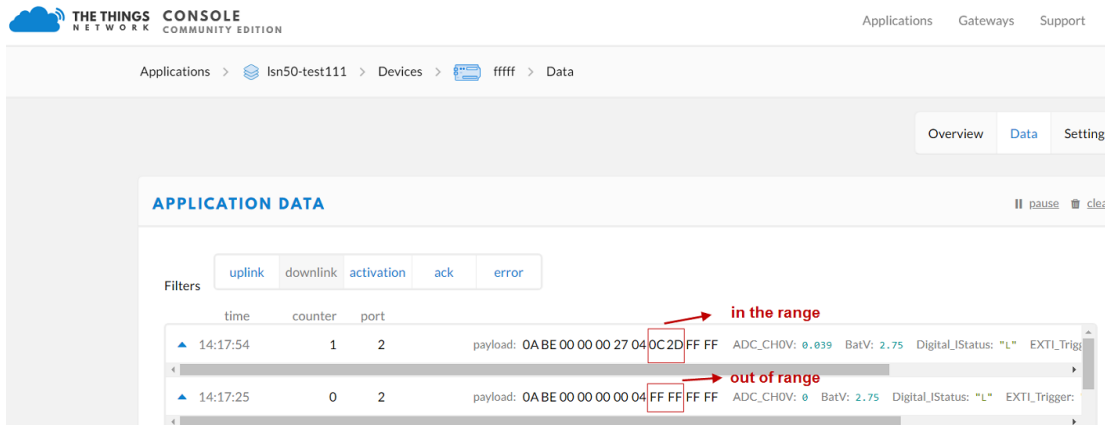

### 2.4.9 +5V Output

Since v1.2 hardware version, a +5v output is added in the hardware. The +5V output will be valid for every sampling. LSN50 will enable +5V output before all sampling and disable the +5v after all sampling.

Since firmware **v1.6.3**, The 5V output time can be controlled by AT Command.

**AT+5VT=1000**

Means set 5V valid time to have 1000ms. So the real 5V output will actually have 1000ms + sampling time for other sensors.

By default the AT+5VT=500. If the external sensor which require 5v and require more time to get stable state, user can use this command to increase the power ON duration for this sensor.




### 2.4.10 Weigh Sensor HX711

Since v1.6.2 firmware, LSN50 support Weigh Sensor HX711.

### 2.4.11 BH1750 Illumination Sensor


Since v1.7.0 firmware, MOD=1 support this sensor. The sensor value is in the 8<sup>th</sup> and 9<sup>th</sup> bytes.

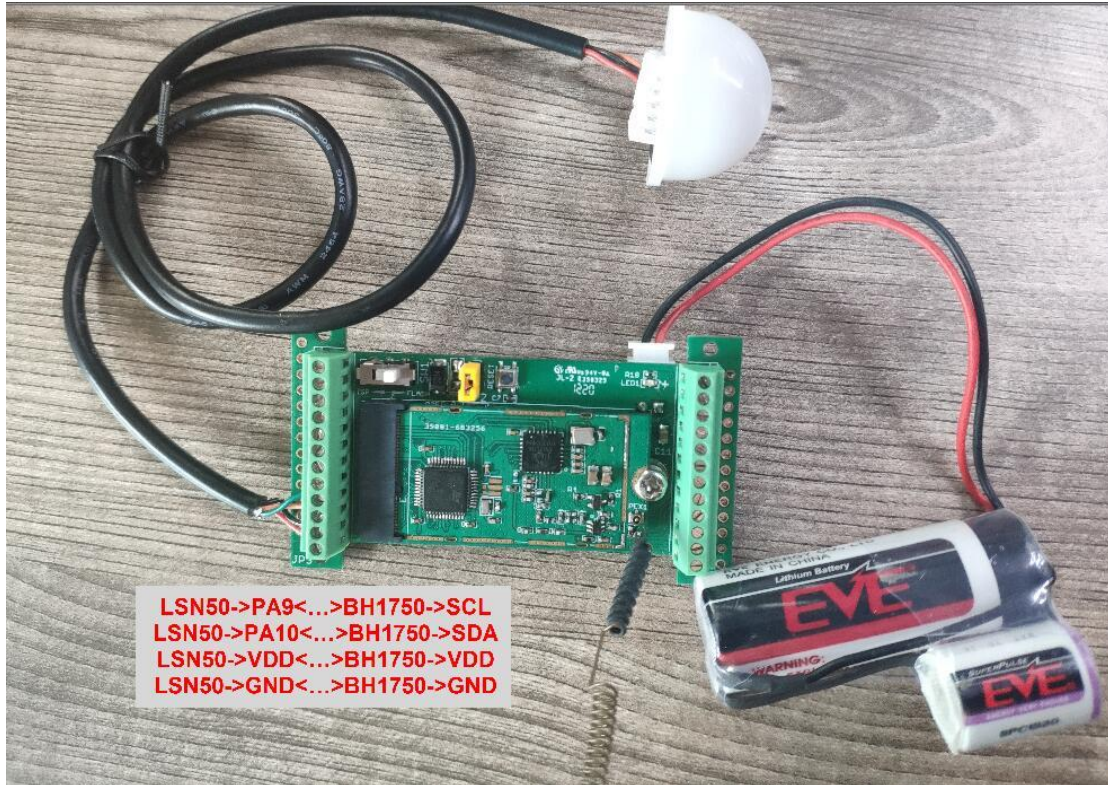

Applications >  engineer-lin > Devices >  Isn50 > Data

Overview Data Settings

#### APPLICATION DATA

|| pause  clear

Filters: uplink downlink activation ack error

time	counter	port	
0 00 A1 00 00 2B 00 00	ADC_CH0V: 0.161	BatV: 3.301	Digital_IStatus: "L" Door_status: "OPEN" EXTI_Trigger: "FALSE" Illum: 43 TempC1: 0 Work_mode: "IIC"
▲ 11:03:23	1	2	payload: 0C E7 00 00 00 A2 00 00 35 00 00 ADC_CH0V: 0.162 BatV: 3.303 Digital_IStatus: "L" Door_status:
▲ 10:58:24	0	2	payload: 0C E7 00 00 00 9E 00 00 87 00 00 ADC_CH0V: 0.158 BatV: 3.303 Digital_IStatus: "L" Door_status:

### 2.4.12 Working MOD

The working MOD info is contained in the Digital in & Digital Interrupt byte (7<sup>th</sup> Byte).

User can use the 3<sup>rd</sup> ~ 7<sup>th</sup> bit of this byte to see the working mod:

Case 7<sup>th</sup> Byte >> 2 & 0x1f:

- 0: MOD1
- 1: MOD2
- 2: MOD3
- 3: MOD4
- 4: MOD5
- 5: MOD6

## 2.5 Configure LSN50 via AT or Downlink

User can configure LSN50 via AT Commands or LoRaWAN Downlink Commands

There are two kinds of Commands:

- ✓ **Common Commands:** They should be available for each sensor, such as: change uplink interval, reset device. For firmware v1.7.0, user can find what common commands it supports:  
[http://wiki.dragino.com/index.php?title=End\\_Device\\_AT\\_Commands\\_and\\_Downlink\\_Commands](http://wiki.dragino.com/index.php?title=End_Device_AT_Commands_and_Downlink_Commands)
- ✓ **Sensor Related Commands:** These commands are special designed for LSN50. User can see these commands below:

### 2.5.1 Common Commands:

They should be available for each of Dragino Sensors, such as: change uplink interval, reset device. For firmware v1.7.0, user can find what common commands it supports:

[http://wiki.dragino.com/index.php?title=End\\_Device\\_AT\\_Commands\\_and\\_Downlink\\_Commands](http://wiki.dragino.com/index.php?title=End_Device_AT_Commands_and_Downlink_Commands)

### 2.5.2 Sensor related commands:

#### Set work mode:

- AT Command:  
AT+MOD=2 // Set work MOD =2. (1:IIC mode,2:Distance mode,3:3ADC mode,4:3DS18B20 mode,5:weight mode)  
AT+MOD=? // Get current work MOD
- Downlink Payload:  
0x0A aa // Same as AT+MOD=aa

#### Set the trigger interrupt mode:

- AT Command:  
AT+INTMOD=2 // Set INTMOD =2. (0:Disable,1:falling or rising,2:falling,3:rising)  
AT+INTMOD=? // Get current INTMOD
- Downlink Payload:  
0x06 000003 // Set AT+INTMOD=3

#### Set the 5V power open time during sampling:

- AT Command:  
AT+5VT=1000 // Set 5v open time to 1000ms  
AT+5VT=? // Check current 5v open duration
- Downlink Payload:  
0x07 aa bb // Equal AT+5VT=0x(aa bb)

### Set the weight to 0g (Zero Calibration)

- AT Command:  
AT+WEIGRE // Set the weight to 0g
  
- Downlink Payload:  
0x08 01 // Set the weight to 0g

### Get or Set the GAP Value (calibrate factor) of measurement

- AT Command:  
AT+WEIGAP=403.0 // Set GAP Value =403.0 (response: Weight: xx g)  
AT+WEIGAP=? // Get current GAP Value
  
- Downlink Payload:  
0x08 02 aa bb // Equal to AT+WEIGAP=0x(aa bb)/10




## 2.6 Show Data in Mydevices IoT Server

Mydevices provides a human friendly interface to show the sensor data, once we have data in TTN, we can use Mydevices to connect to TTN and see the data in Mydevices. Below are the steps:

Step 1: Be sure that your device is programmed and properly connected to the network at this time.


Step 2: To configure the Application to forward data to Mydevices you will need to add integration. To add the Mydevices integration, perform the following steps:

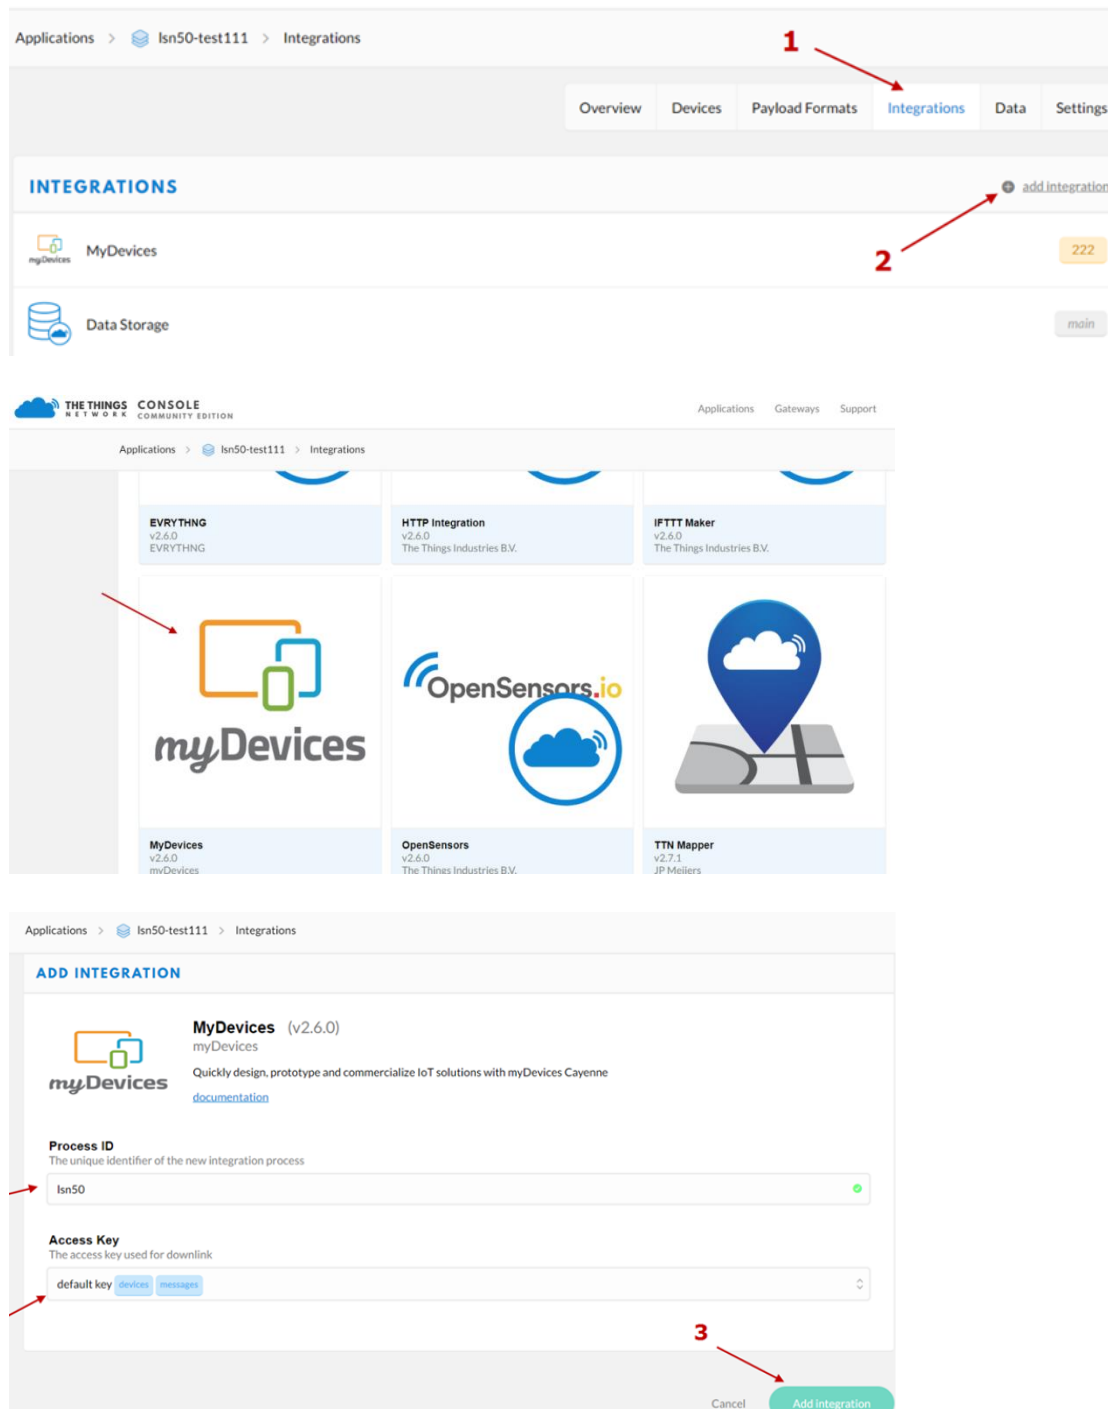

Step 3: Create an account or log in Mydevices.


Step 4: Search the LSN50 and add DevEUI.

Use the LSN50 v1.6+ for the firmware version > v1.6 under LoRa --> The things network

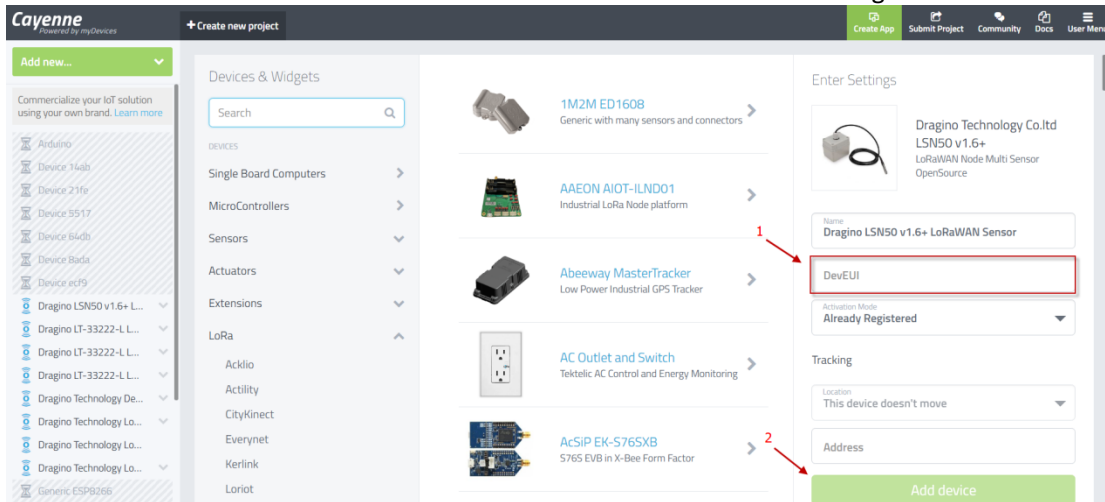


After added, the sensor data arrive TTN, it will also arrive and show in Mydevices.

Example for AT+MOD=1 plus SHT20 + DS18B20 sensor:

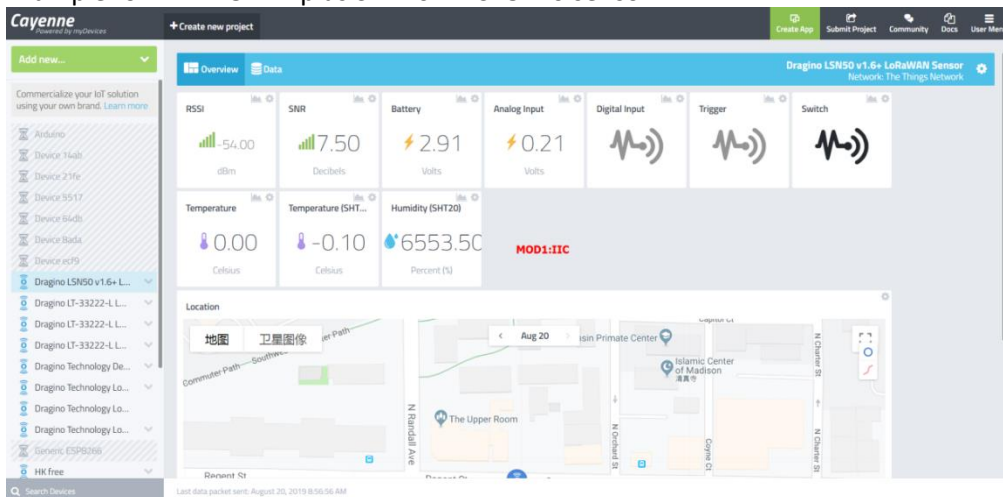

MOD=2

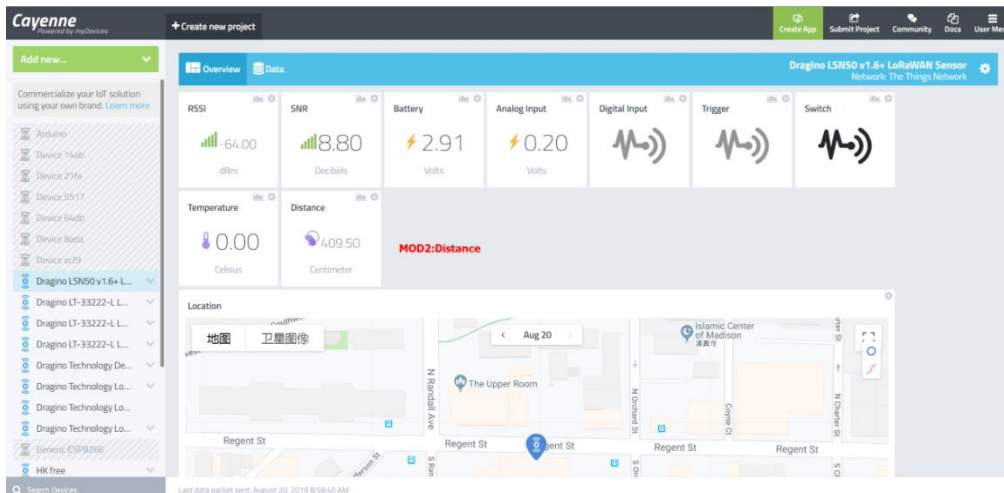

MOD=3.

**Cayenne** Powered by myDevices + Create new project Create App Submit Project Community Docs User Menu

**Dragino LSN50 v1.6+ LoRaWAN Sensor**  
Network: The Things Network

RSSI -67.00 dBm	SNR 9.00 Decibels	Battery 2.90 Volts	Analog Input 0.21 Volts	Analog Input 2 0.36 Volts	Analog Input 3 0.22 Volts	Digital Input	Trigger
Switch	Temperature 0.00 Celsius	Temperature (SHT...) -0.10 Celsius	Humidity (SHT20) 6553.50 Percent (%)	<b>MOD3:3ADC</b>			

**Location**  
Map showing Regent St, N Randall Ave, and Islamic Center of Madison. Last data packet sent: August 20, 2019 8:59:47 AM

## 2.7 Firmware Change Log

\* **[Firmware download link](#)**

<http://www.dragino.com/downloads/index.php?dir=LSN50-LoRaST/Firmware/LSN50.hex/>

\* **Firmware Change Log:**

<http://www.dragino.com/downloads/index.php?dir=LSN50-LoRaST/Firmware/LSN50.hex/>

## 2.8 Use VDD or +5V to Power External Sensor

User can use VDD or +5V to power external sensor. Note:

- 1) VDD is 2.5~3.3v from the battery + diode, the VDD is always on, so when use VDD to power external sensor, make sure the sensor has a low power consumption in sleep mode ( less 50 uA) to get a long battery life.
- 2) +5V output is only ON when sampling. And MCU will turn off it after sampling. So if sensor can support 5v, +5V out is the best choice. [See here for more info.](#)

Note: Always test the actually current pass by the JP2 jumper when connect to a new type of sensor.

## 2.9 Battery Analysis

### 2.9.1 Battery Type

The LSN50 battery is a combination of a 4000mAh or 8500mAh Li/SOCI2 Battery and a Super Capacitor. The battery is non-rechargeable battery type with a low discharge rate (<2% per year). This type of battery is commonly used in IoT devices such as water meter.

The battery is designed to last for more than 5 years for the LSN50.

The battery related documents as below:

- [Battery Dimension](#),
- [Lithium-Thionyl Chloride Battery](#) datasheet, [Tech Spec](#)
- [Lithium-ion Battery-Capacitor](#) datasheet, [Tech Spec](#)



### 2.9.2 Power consumption Analyze

When connect to different sensors, it is good to test the power consumption with the sensor working. User can remove the ON/OFF Jumper of LSN50, and connect a multimeter between the two pins of this header and measure the current to know the whole system power consumption. Because the sleep mode will have as low as 10uA, at least 4.5 digit multimeter is required to measure this level of current.

A victor VC86E is recommended.




In a minimum system with DS18B20 and Oil Sensor and default firmware, the power consumption includes:

1. Deep Sleep (Stop mode) for STM32. ~ 5uA

2. Sampling current while reading DS18B20 and Oil Sensor
  - Oil Sensor sampling time: 200us, current: 0.3mA
  - DS18B20 sampling time: 750ms, current: 0.64mA
  - Above power should add 8mA CPU power in working mode.
3. LoRaWAN transmit and receive time consumption. The LoRa TX / RX time and power can be found in the [LoRa calculator tool](#).

In a typical LoRaWAN data transmit. The energy profile is as below:

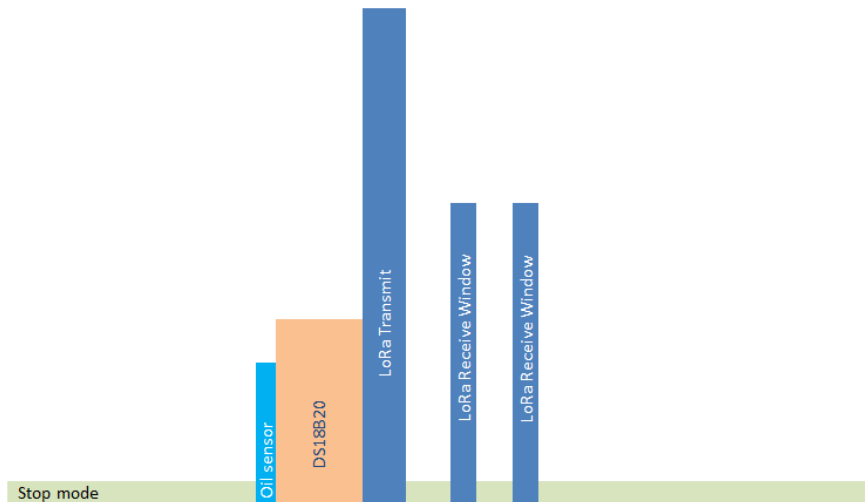

### LoRaWAN Energy Profile in one period

In the LoRaWAN protocol, the device will transfer in different LoRa Radio, and have different energy profile in LoRa part. We can calculate the battery life in two cases:

- 1) Lower power LoRa radio. Device has a good signal to gateway
- 2) Higher power LoRa radio. Device has a poor signal to gateway

#### Low Power Case:

- Radio Parameter: SF7, 125kHz, 20dbm
- Transmit interval: 15 minutes.
- Payload: 8 Bytes.

#### High Power Case:

- Radio Parameter: SF10, 125kHz, 20dbm
- Transmit interval: 15 minutes.
- Payload: 8 Bytes.

To simplify the calculation, we can:

- Combine oil sensor and DS18B20 sampling energy together to **751ms@8.64ma**
- Combine the two RX windows together.

There is a [power consumption tool](#) for easy analysis. Below is the analysis result.



Scenarios		A	B	C	D	E	F
		Scenario_A	Scenario_B	Scenario_C	Scenario_D	Scenario_E	Scenario_F
<b>Time</b>	Units						
Sleep	min	15	15	15			
Sampling	ms	751	751	5000			
Transmit	ms	100	274.4	34.3			
Receive	ms	72	491.4	82			
Radio type		SF7_125K_20dB	SF10_125K_20dB	SF7_125K_14dB			
# of bytes transmitted		8	8	8			
<b>Total System Current</b>							
Sleep	mA	0.005	0.005	0.005			
Sampling	mA	0.64	0.64	0.64			
Transmit	mA	133	133	52			
Receive	mA	18.8	18.8	18.8			
		Micro-Controller Active power (mA): 8					
<b>Power usage comparison</b>							
Sleep	%	22.92%	8.87%	40.82%	0.00%	0.00%	0.00%
Sampling	%	2.45%	0.95%	29.02%	0.00%	0.00%	0.00%
Transmit	%	67.74%	71.96%	16.18%	0.00%	0.00%	0.00%
Receive	%	6.89%	18.22%	13.98%	0.00%	0.00%	0.00%
		Legend: Red > 100%, Green <= 100%					
<b>Average current</b>	mA	0.021793472	0.056254259	0.012180976	0	0	0
<b>Design Goals</b>							
System efficiency		90%	90%	90%	90%	90%	90%
Target battery life	yr	2	2	2	2	2	2
Required battery capac	mAh	424.54	1095.83	237.29	0.00	0.00	0.00
or							
Given battery capacity	mAh	4000	4000	4000	4000	4000	4000
Estimated battery life	yr	18.84	7.30	33.71	0.00	0.00	0.00

Note: Ignore the 18 year result, because the battery has a max 2% discharge per year.

### 2.9.3 Battery Note

The Li-SiCO battery is designed for small current / long period application. It is not good to use a high current, short period transmit method. The recommended minimum period for use of this battery is 5 minutes. If you use a shorter period time to transmit LoRa, then the battery life may be decreased.

### 2.9.4 Replace the battery

You can change the battery in the LSN50. The type of battery is not limited as long as the output is between 3v to 3.6v. On the main board, there is a diode (D1) between the battery and the main circuit. If you need to use a battery with less than 3.3v, please remove the D1 and shortcut the two pads of it so there won't be voltage drop between battery and main board.

The default battery pack of LSN50 includes a ER18505 plus super capacitor. If user can't find this pack locally, they can find ER18505 or equivalence, which will also work in most case. The SPC can enlarge the battery life for high frequency use (update period below 5 minutes)

## 3. Using the AT Commands

### 3.1 Access AT Commands

LSN50 supports AT Command set in the stock firmware. You can use a USB to TTL adapter to connect to LSN50 for using AT command, as below.


LSN50 v1 UART connection photo



LSN50 v2 UART connection photo



In the PC, you need to set the serial baud rate to **9600** to access the serial console for LSN50. LSN50 will output system info once power on as below:

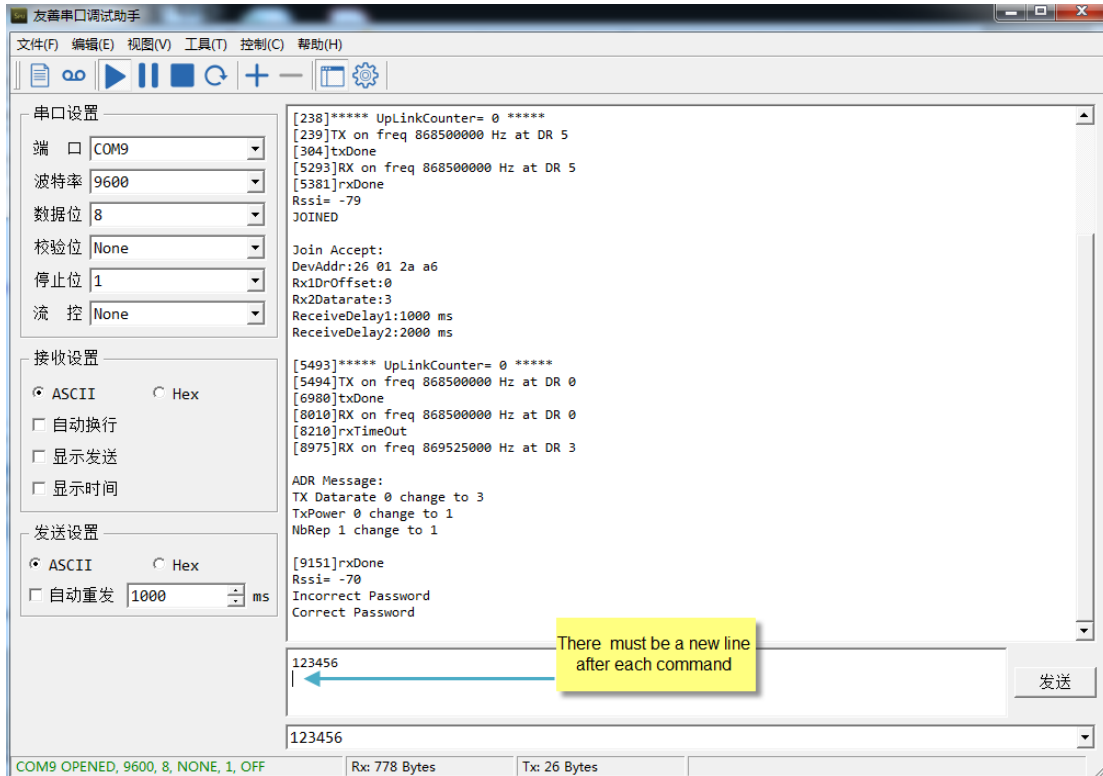

## 3.2 Common AT Command Sequence

### 3.2.1 Multi-channel ABP mode (Use with SX1301/LG308)

If device has not joined network via OTAA:

```
AT+FDR
AT+NJM=0
ATZ
```

If device already joined network:

```
AT+NJM=0
ATZ
```

### 3.2.2 Single-channel ABP mode (Use with LG01/LG02)

See [Sect 6.7](#)

## 4. Upload Firmware

### Notes:

- Since image v1.3, the firmware will show version info during boot. If your device doesn't show version info, you may have a very old image version.
- Always run AT+FDR to reset parameters to factory default after an update image. If the update is from image  $\geq$  v1.3 to another image version  $\geq$  v1.3, then the keys will be kept after running AT+FDR. Otherwise (e.g. from v1.2 to v1.3), AT+FDR may erase the keys.

### 4.1 Upload Firmware via Serial Port


The LSN50's AT Command port can be used for firmware upgrade. The hardware connection for upgrade firmware is as below:





**Step1:** Download [flash loader](#).

**Step2:** Download the [LSN50 Image files](#).


**Step3:** Open flashloader; choose the correct COM port to update

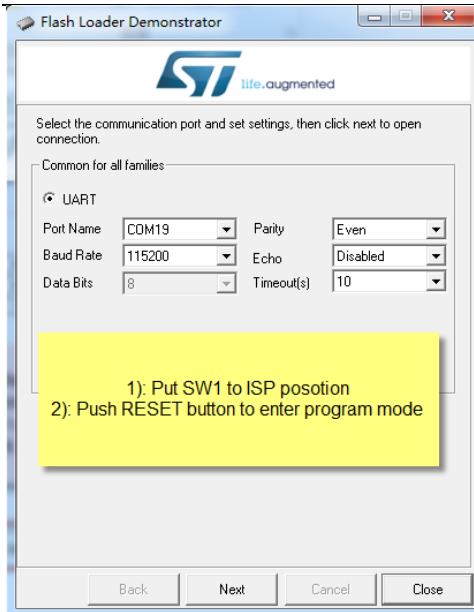

Board detected

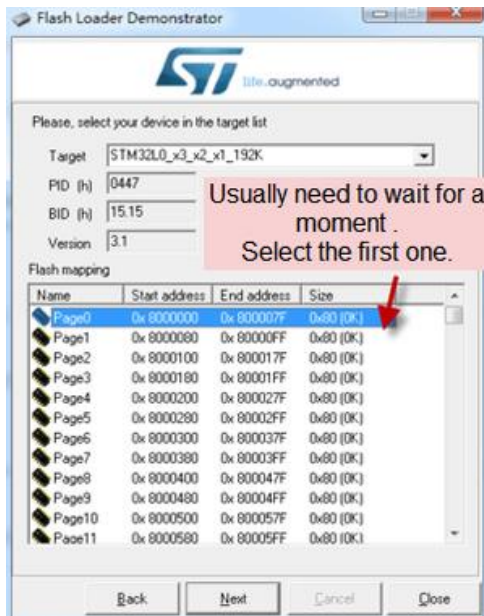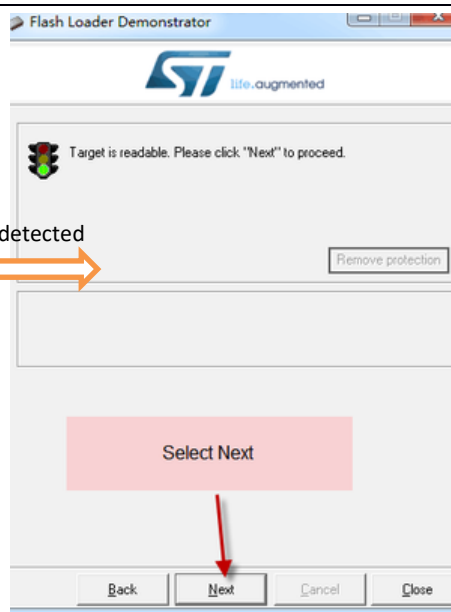



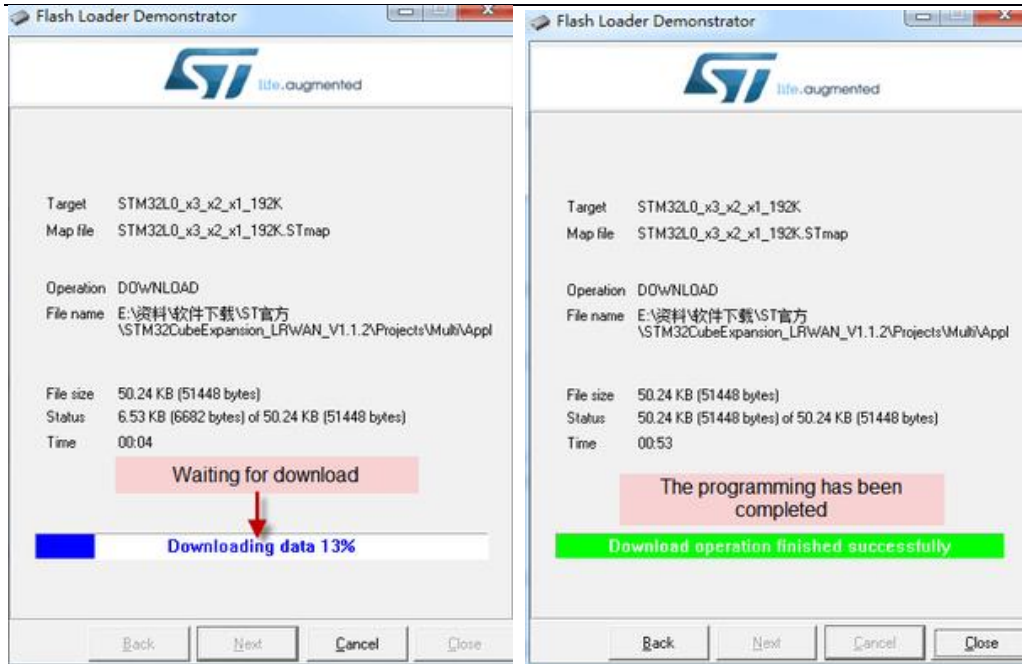


**Step4:** Switch SW1 back to flash state and push the RESET button.  
The LSN50 will then run the new firmware.



## 4.2 Upload Firmware via ST-Link V2

You can use ST-LINK to upgrade firmware into LSN50. The hardware connection for upgrade firmware is as below:

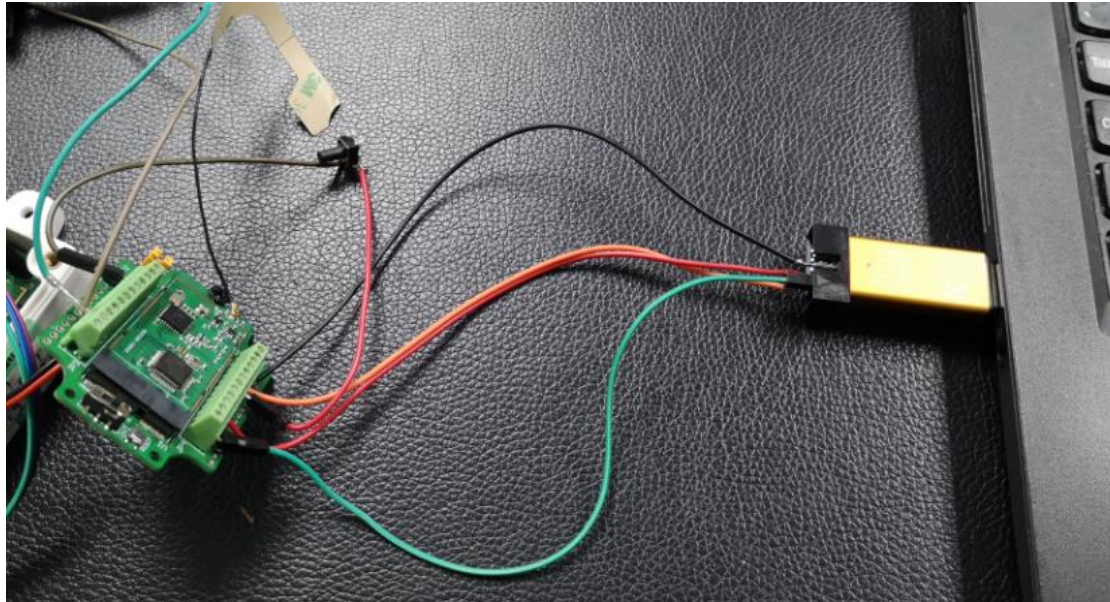

Connection:


- ST-LINK v2 GND <--> LSN50 GND
- ST-LINK v2 SWCLK <--> LSN50 PA14
- ST-LINK v2 SWDIO <--> LSN50 PA13
- ST-LINK v2 RST <--> LSN50 NRST.

**Step1:** Install [ST-LINK driver](#) first and then install [ST-LINK Utility](#)

**Step2:** Download the [LSN50 Image files](#).


**Step3:** Open ST-LINK utility, **file --> open file** to select the image to be upgraded.

**Step4:** Click the “**Program Verify**” button on ST-LINK.

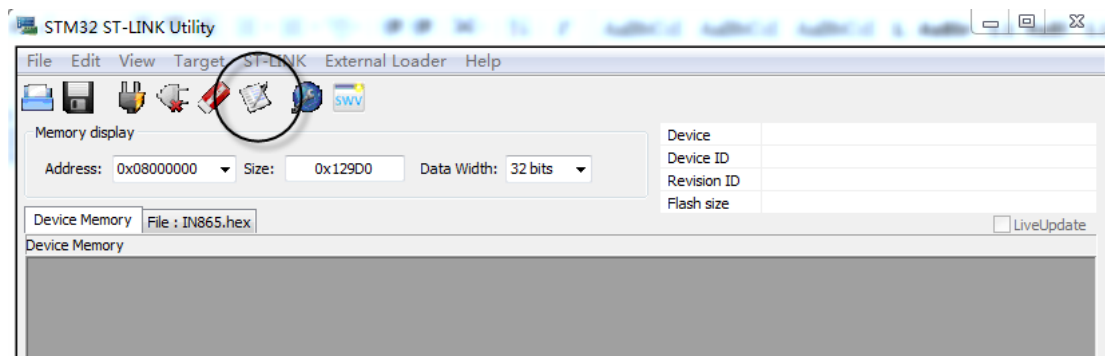

**Step5:** The led on the ST-LINK adapter will now blinking, and the ST-Link utility will pop up a download window. Click the start button to download the image to LSN50.

NOTE: If this step fails, ST-LINK can't establish connection to LSN50, please try to swap SWDIO & SWCLK pin. Some ST-LINK v2 devices are incorrectly marked.

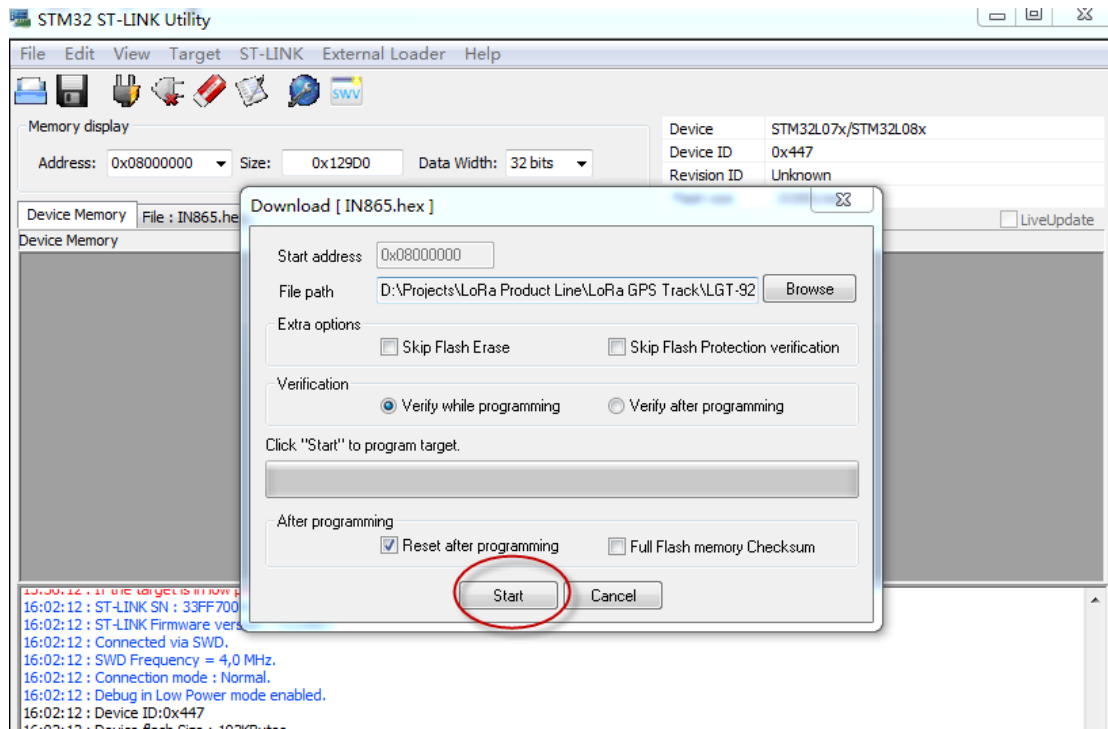

## 5. Developer Guide

### [Software Source Code Download Link.](https://github.com/dragino/LoRa_STM32/tree/master/STM32CubeExpansion_LRWAN)

([https://github.com/dragino/LoRa\\_STM32/tree/master/STM32CubeExpansion\\_LRWAN](https://github.com/dragino/LoRa_STM32/tree/master/STM32CubeExpansion_LRWAN))

### [Hardware Source Code Download Link](https://github.com/dragino/Lora/tree/master/LSN50)

(<https://github.com/dragino/Lora/tree/master/LSN50>)


LSN50 is an open source project, developer can use compile their firmware for customized applications. User can get the source code from:

- Software Source Code:  
[https://github.com/dragino/LoRa\\_STM32/tree/master/STM32CubeExpansion\\_LRWAN](https://github.com/dragino/LoRa_STM32/tree/master/STM32CubeExpansion_LRWAN)
- Hardware Design files:  
<https://github.com/dragino/Lora/tree/master/LSN50>
- Compile instruction:  
[http://wiki.dragino.com/index.php?title=Firmware\\_Compile\\_Instruction\\_--\\_STM32](http://wiki.dragino.com/index.php?title=Firmware_Compile_Instruction_--_STM32)


Use Keil to open project file:

STM32CubeExpansion\_LRWAN/Projects/Multi/Applications/LoRa/DRAGINO-LRWAN(AT)/MDK-ARM/STM32L072CZ-Nucleo/Lora.uvprojx


In Keil, you can see what frequency band the code support.

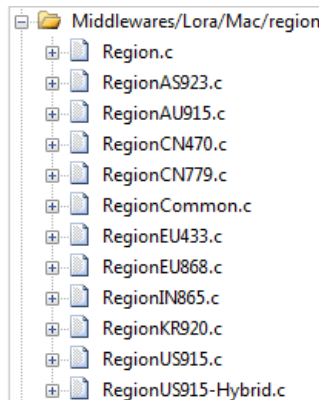

1. If you want to change frequency, modify the Preprocessor Symbols.  
For example, change EU868 to US915

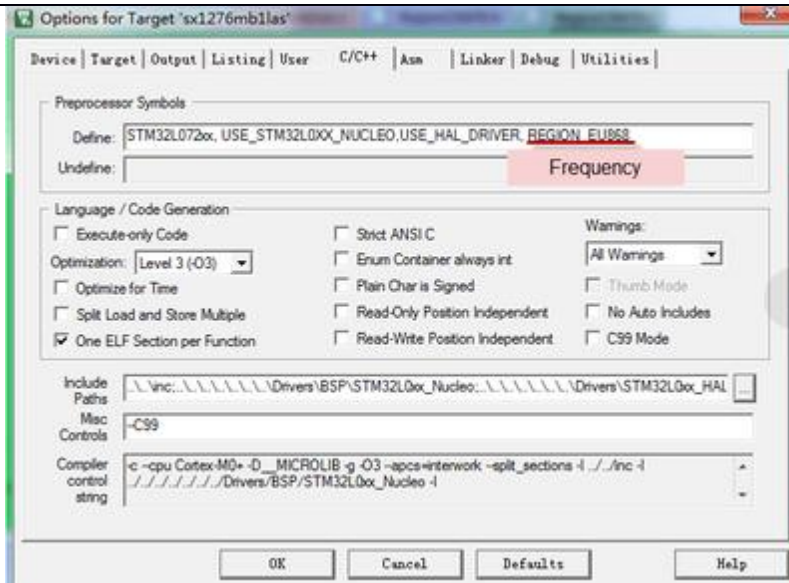

2. Compile and build

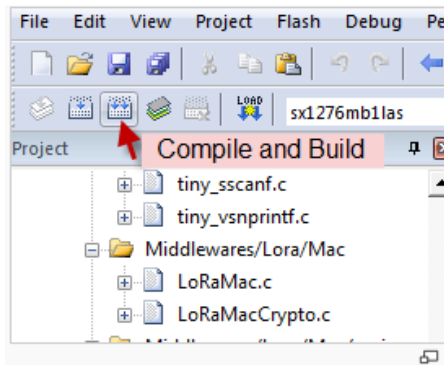

## 6. FAQ

### 6.1 Why there is 433/868/915 version?

Different countries have different rules for the ISM band for LoRa. Although the LoRa chip can support a wide range of Frequencies, we provide different versions of the hardware for best tune of the LoRa hardware part.

### 6.2 What is the frequency range of LT LoRa part?

Different LT version supports different frequency range, below is the table for the working frequency and recommend bands for each model.

Version	LoRa IC	Working Frequency	Best Tune Frequency	Recommend Bands
433	SX1278	Band2(LF): 410 ~525 Mhz	433Mhz	CN470/EU433
868	SX1276	Band1(HF):862~1020 Mhz	868Mhz	EU868
915	SX1276	Band1(HF):862 ~1020 Mhz	915Mhz	AS923/AU915/ KR920/US915

### 6.3 How to change the LoRa Frequency Bands/Region?

You can follow the instructions for [how to upgrade image](#).

When downloading the images, choose the required image file for download.

### 6.4 Can I use Private LoRa protocol?

The stock firmware is based on LoRaWAN protocol. You can use a private LoRa protocol in LSN50. This section describes an example for base LoRa transfer. It is a reference/demo and we do not provide further software development support on this topic.

In this demo, we will show the communication between LoRa Shield and LSN50, both of them using the basic LoRa library. LSN50 will send a message to a LoRa Shield and the LoRa Shield will print it to the console.

### LoRa Shield + UNO:

Use the [LoRa Library](#) and upload the [LoRa Receive](#) Sketch to Arduino.

#### Refs:

[http://www.dragino.com/downloads/index.php?dir=LSN50-LoRaST/LoRa\\_Raw\\_Example/Arduino/&file=LoRa.zip](http://www.dragino.com/downloads/index.php?dir=LSN50-LoRaST/LoRa_Raw_Example/Arduino/&file=LoRa.zip)  
[http://www.dragino.com/downloads/downloads/LSN50-LoRaST/LoRa\\_Raw\\_Example/Arduino/LoRaReceiver.ino](http://www.dragino.com/downloads/downloads/LSN50-LoRaST/LoRa_Raw_Example/Arduino/LoRaReceiver.ino)


Open the serial monitor to Arduino. The device acts as a LoRa Receiver and listen on the frequency 868.3Mhz by default.

### LSN50:

Use the <[LoRa RAW code](#)> . The project file is in: MDK-ARM\STM32L072CZ-Nucleo\ Lora.uvprojx

[Compile](#) it and [Upload](#) it to LSN50, the LSN50 will transfer on the frequency 868.3Mhz.

In the Arduino Console, it will see the received packets as below.

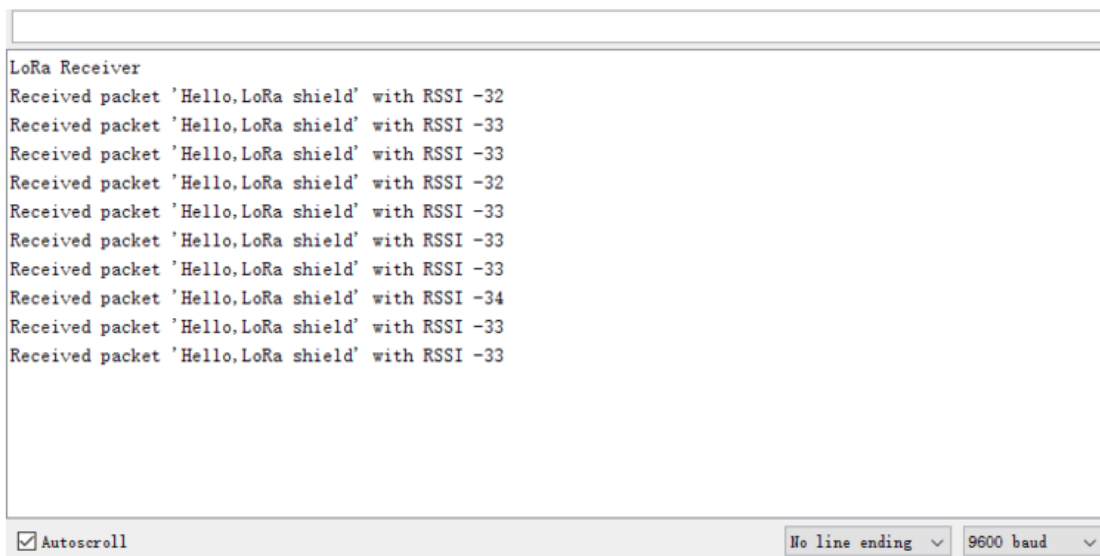

```
LoRa Receiver
Received packet 'Hello,LoRa shield' with RSSI -32
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -32
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -34
Received packet 'Hello,LoRa shield' with RSSI -33
Received packet 'Hello,LoRa shield' with RSSI -33
```

Autoscroll      No line ending      9600 baud

## 6.5 How to set up LSN50 to work in 8 channel mode

By default, the frequency bands US915, AU915, CN470 work in 72 frequencies. Many gateways are 8 channel gateways, and in this case, the OTAA join time and uplink schedule is long and unpredictable while the end node is hopping in 72 frequencies.

You can configure the end node to work in 8 channel mode by using the AT+CHE command. The 500kHz channels are always included for OTAA.



For example, in **US915** band, the frequency table is as below. By default, the end node will use all channels (0~71) for OTAA Join process. After the OTAA Join, the end node will use these all channels (0~71) to send uplink packets.

CHE	US915 Uplink Channels(125KHz,4/5,Unit:MHz,CHS=0)								
0	ENABLE Channel 0-63								
1	902.3	902.5	902.7	902.9	903.1	903.3	903.5	903.7	Channel 0-7
2	903.9	904.1	904.3	904.5	904.7	904.9	905.1	905.3	Channel 8-15
3	905.5	905.7	905.9	906.1	906.3	906.5	906.7	906.9	Channel 16-23
4	907.1	907.3	907.5	907.7	907.9	908.1	908.3	908.5	Channel 24-31
5	908.7	908.9	909.1	909.3	909.5	909.7	909.9	910.1	Channel 32-39
6	910.3	910.5	910.7	910.9	911.1	911.3	911.5	911.7	Channel 40-47
7	911.9	912.1	912.3	912.5	912.7	912.9	913.1	913.3	Channel 48-55
8	913.5	913.7	913.9	914.1	914.3	914.5	914.7	914.9	Channel 56-63
Channels(500KHz,4/5,Unit:MHz,CHS=0)									
	903	904.6	906.2	907.8	909.4	911	912.6	914.2	Channel 64-71

When you use the TTN network, the US915 frequency bands use are:

- 903.9 - SF7BW125 to SF10BW125
- 904.1 - SF7BW125 to SF10BW125
- 904.3 - SF7BW125 to SF10BW125
- 904.5 - SF7BW125 to SF10BW125
- 904.7 - SF7BW125 to SF10BW125
- 904.9 - SF7BW125 to SF10BW125
- 905.1 - SF7BW125 to SF10BW125
- 905.3 - SF7BW125 to SF10BW125
- 904.6 - SF8BW500

Because the end node is now hopping in 72 frequency, it makes it difficult for the devices to Join the TTN network and uplink data. To solve this issue, you can access the device via the AT commands and run:

**AT+CHE=2**

**ATZ**

to set the end node to work in 8 channel mode. The device will work in Channel 8-15 & 64-71 for OTAA, and channel 8-15 for Uplink.

The **AU915** band is similar. Below are the AU915 Uplink Channels.


CHE	AU915 Uplink Channels(125KHz,4/5,Unit:MHz,CHS=0)								
0	ENABLE Channel 0-63								
1	915.2	915.4	915.6	915.8	916	916.2	916.4	916.6	Channel 0-7
2	916.8	917	917.2	917.4	917.6	917.8	918	918.2	Channel 8-15
3	918.4	918.6	918.8	919	919.2	919.4	919.6	919.8	Channel 16-23
4	920	920.2	920.4	920.6	920.8	921	921.2	921.4	Channel 24-31
5	921.6	921.8	922	922.2	922.4	922.6	922.8	923	Channel 32-39
6	923.2	923.4	923.6	923.8	924	924.2	924.4	924.6	Channel 40-47
7	924.8	925	925.2	925.4	925.6	925.8	926	926.2	Channel 48-55
8	926.4	926.6	926.8	927	927.2	927.4	927.6	927.8	Channel 56-63
Channels(500KHz,4/5,Unit:MHz,CHS=0)									
	915.9	917.5	919.1	920.7	922.3	923.9	925.5	927.1	Channel 64-71

## 6.6 How to set up LSN50 to work with Single Channel Gateway such as LG01/LG02?

In this case, users need to set LSN50 to work in ABP mode and transmit in only one frequency.

Assume we have a LG02 working in the frequency 868400000 now, below is the steps.

**Step1:** Log in TTN, Create an ABP device in the application and input the network session key (NETSKEY), app session key (APPSKEY) from the device.

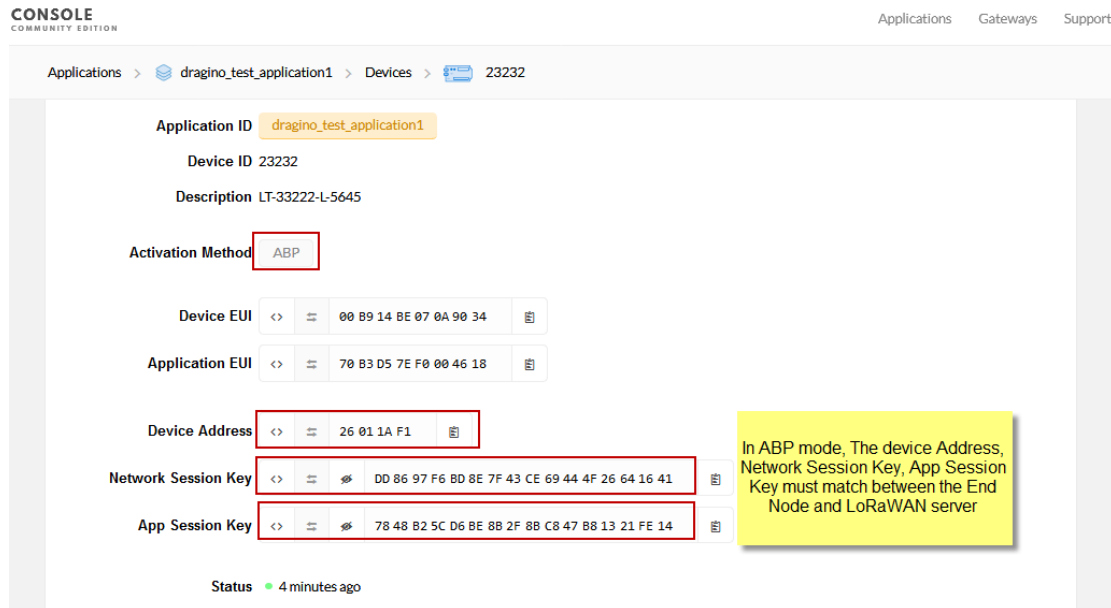

The screenshot shows the TTN Console interface for a device configuration. The breadcrumb trail is: Applications > dragino\_test\_application1 > Devices > 23232. The configuration details are as follows:

- Application ID: dragino\_test\_application1
- Device ID: 23232
- Description: LT-33222-L-5645
- Activation Method: ABP
- Device EUI: 00 B9 14 BE 07 0A 90 34
- Application EUI: 70 B3 D5 7E F0 00 46 18
- Device Address: 26 01 1A F1
- Network Session Key: DD 86 97 F6 BD 8E 7F 43 CE 69 44 4F 26 64 16 41
- App Session Key: 78 48 B2 5C D6 BE 8B 2F 8B C8 47 B8 13 21 FE 14

A yellow callout box on the right states: "In ABP mode, The device Address, Network Session Key, App Session Key must match between the End Node and LoRaWAN server". The status at the bottom is "Status: 4 minutes ago".


**Note:** You need to make sure the above three keys match in the device and in TTN. You can change them either in TTN or in the Device to make them match. In TTN, NETSKEY and APPSKEY can be configured in the setting page, but the Device Addr is generated by TTN. You can also change the Device ADDR in TTN by using the [The Things Network CLI](#).

**Step2:** Run AT commands to make the LSN50 work in Single frequency and ABP mode.

Below are the AT commands:

```
AT+FDR Reset Parameters to Factory Default, Keys Reserve
AT+NJM=0 Set to ABP mode
AT+ADR=0 Set the Adaptive Data Rate Off
AT+DR=5 Set Data Rate (Set AT+DR=3 for 915 band)
AT+TDC=300000 Set transmit interval to 5 minutes
AT+CHS=868400000 Set transmit frequency to 868.4Mhz
AT+DADDR=26 01 1A F1 Set Device Address to 26 01 1A F1
ATZ Reset MCU
```

As shown below:

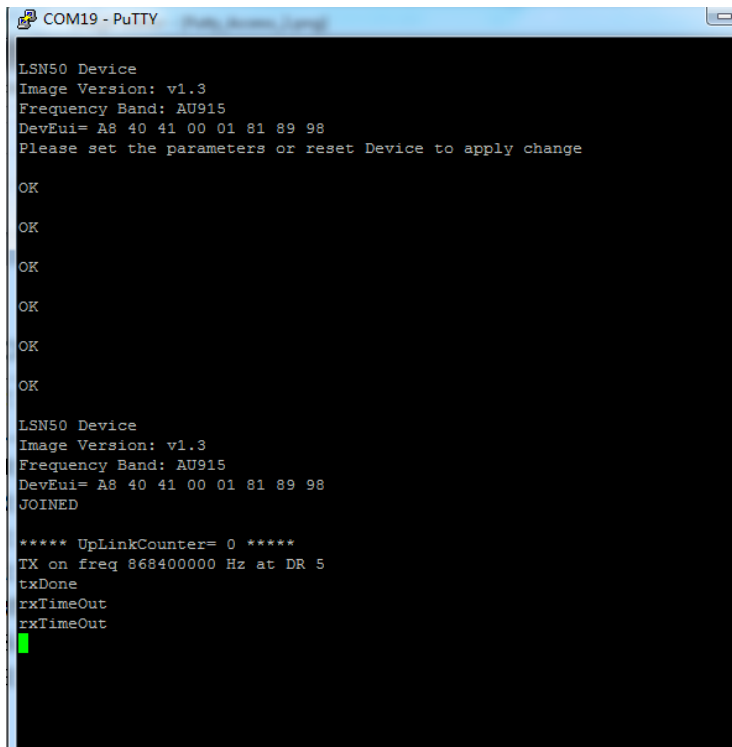

```
COM19 - PuTTY
LSN50 Device
Image Version: v1.3
Frequency Band: AU915
DevEui= A8 40 41 00 01 81 89 98
Please set the parameters or reset Device to apply change

OK
OK
OK
OK
OK
OK
OK

LSN50 Device
Image Version: v1.3
Frequency Band: AU915
DevEui= A8 40 41 00 01 81 89 98
JOINED

***** UpLinkCounter= 0 *****
TX on freq 868400000 Hz at DR 5
txDone
rxTimeOut
rxTimeOut
█
```

## 6.7 How to configure the EUI keys in LSN50?

The early version of LSN50 firmware doesn't have pre-configured keys.

It is recommended that you update the image to the latest version before configure the keys.

Refer [upgrade image](#) to update the firmware to the latest version.

Run AT commands to set the keys to desired keys; refer [AT Command manual](#).


## 7. Trouble Shooting

### 7.1 Connection problem when uploading firmware.

**Issue:** While using USB to TTL to upload firmware via UART interface. It works for several times but most of times it fails.

**Checklist:**

1. Double check if follow up exactly the steps as manual.
2. Check if hardware works fine: a) check if AT command works, b) check if ISP / flash switch works: PA12 will have different output level while set the ISP/Flash Switch in different position. c) check if reset button works.
3. If you use Windows10 system. Please change the flash loader to run in Windows7 compatibility mode.

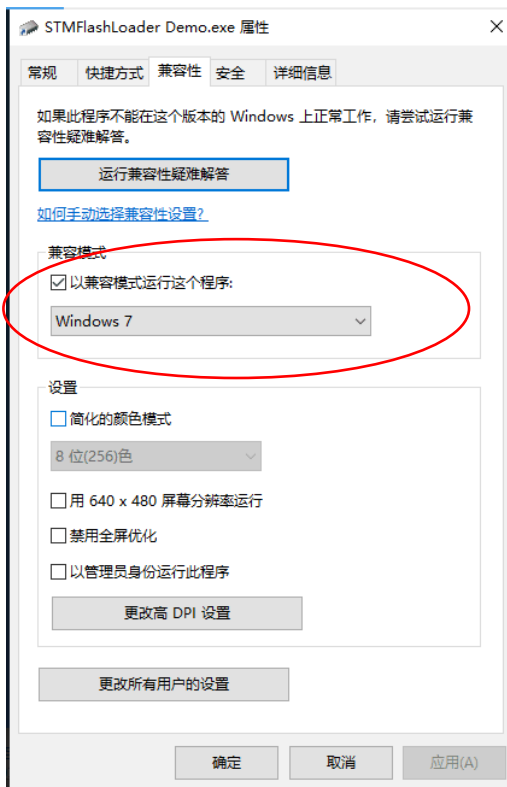

4. We have seen cases where the FT232 USB TTL adapter has a reliability issue with the PC USB chipset (Intel). In this case, even though points 1 and 2 above work, it still has a reliability issue for uploading. If this happens, change to a different PC or change the USB to TTL adapter to solve the issue.

### 7.2 Why I can't join TTN in US915 / AU915 bands?

It is due to channel mapping. Please see the [Eight Channel Mode](#) section above for details.

### 7.3 AT Command input doesn't work

In the case if user can see the console output but can't type input to the device. Please check if you already include the **ENTER** while sending out the command. Some serial tool doesn't send **ENTER** while press the send key, user need to add ENTER in their string.

## 8. Order Info

Part Number: **LSN50-XX-YY or LSN50-v2-XX-YY-ZZ**

**XX:** The default frequency band

- **AS923:** LoRaWAN AS923 band
- **AU915:** LoRaWAN AU915 band
- **EU433:** LoRaWAN EU433 band
- **EU868:** LoRaWAN EU868 band
- **KR920:** LoRaWAN KR920 band
- **US915:** LoRaWAN US915 band
- **IN865:** LoRaWAN IN865 band
- **CN470:** LoRaWAN CN470 band

**YY:** Hole Option

- **12:** With M12 waterproof cable hole
- **16:** With M16 waterproof cable hole
- **20:** With M20 waterproof cable hole (LSN50 v2 doesn't have this version)
- **NH:** No Hole

**ZZ:** Battery Option ( Only valid for v2 model)

- **4:** with 4000mAh battery
- **8:** with 8500mAh battery

## 9. Packing Info

**For LSN50:**

**Package Includes:**

- LSN50 LoRa Sensor Node x 1

**Dimension and weight:**

- Device Size: 8 x 6.5 x 5 cm
- Device Weight: 137g
- Package Size / pcs : 9 x 7 x 6cm
- Weight / pcs : 160g

**For LSN50 v2:**

**Package Includes:**

- LSN50 v2 LoRa Sensor Node x 1
- External antenna x 1
- Spring Antenna (evaluate purpose)

**Dimension and weight:**

- Device Size: 9.7 x 6.5 x 4.7 cm
- Device Weight: 150g
- Package Size / pcs : 14.0 x 8x 5 cm
- Weight / pcs : 180g



## 10. Support

- Support is provided Monday to Friday, from 09:00 to 18:00 GMT+8. Due to different time zones we cannot offer live support. However, your questions will be answered as soon as possible in the before-mentioned schedule.
- Provide as much information as possible regarding your enquiry (product models, accurately describe your problem and steps to replicate it etc) and send a mail to

[support@dragino.com](mailto:support@dragino.com)

## 11. References

- ✧ [Product Page](#)  
(<http://www.dragino.com/products/lora/item/128-lsn50.html>)
- ✧ [Data Sheet](#)  
([http://www.dragino.com/downloads/index.php?dir=datasheet/EN/&file=Datasheet\\_LoRaSensorNode.pdf](http://www.dragino.com/downloads/index.php?dir=datasheet/EN/&file=Datasheet_LoRaSensorNode.pdf))
- ✧ [Image Download](#)  
([https://github.com/dragino/LoRa\\_STM32/tree/master/LSN50.hex](https://github.com/dragino/LoRa_STM32/tree/master/LSN50.hex))
- ✧ Mechanical Drawing:  
[http://www.dragino.com/downloads/index.php?dir=LSN50-LoRaST/Mechanical\\_Drawing/](http://www.dragino.com/downloads/index.php?dir=LSN50-LoRaST/Mechanical_Drawing/)